



Beam Diagnostics

Lecture 1

Ulrich Raich
CERN AB - BI
(Beam Instrumentation)



Overview

- First hour:
 - Introduction
 - Overview of measurement instruments
 - Faraday Cup
 - Beam Current Transformer
 - Beam Position Monitor
 - Profile Detectors
 - SEMGrids
 - Wire Scanners
 - Beam Loss Monitors
- Second hour
 - Some depicted examples of beam parameter measurements



Introduction

An accelerator can never be better than the instruments measuring its performance!



U. Raich CAS Frascati 2008
Beam Diagnostics

3

CAS

THE CERN ACCELERATOR SCHOOL



Different uses of beam diagnostics

- **Regular crude checks of accelerator performance**
 - Beam Intensity
 - Radiation levels
- **Standard regular measurements**
 - Emittance measurement
 - Trajectories
 - Tune
- **Sophisticated measurements e.g. during machine development sessions**
 - May require offline evaluation
 - May be less *comfortable*





Diagnostic devices and quantity measured

Instrument	Physical Effect	Measured Quantity	Effect on beam
Faraday Cup	Charge collection	Intensity	Destructive
Current Transformer	Magnetic field	Intensity	Non destructive
Wall current monitor	Image Current	Intensity Longitudinal beam shape	Non destructive
Pick-up	Electric/magnetic field	Position	Non destructive
Secondary emission monitor	Secondary electron emission	Transverse size/shape, emittance	Disturbing, can be destructive at low energies
Wire Scanner	Secondary particle creation	Transverse size/shape	Slightly disturbing
Scintillator screen	Atomic excitation with light emission	Transverse size/shape (position)	Destructive
Residual Gas monitor	Ionization	Transverse size/shape	Non destructive



A beam parameter measurement

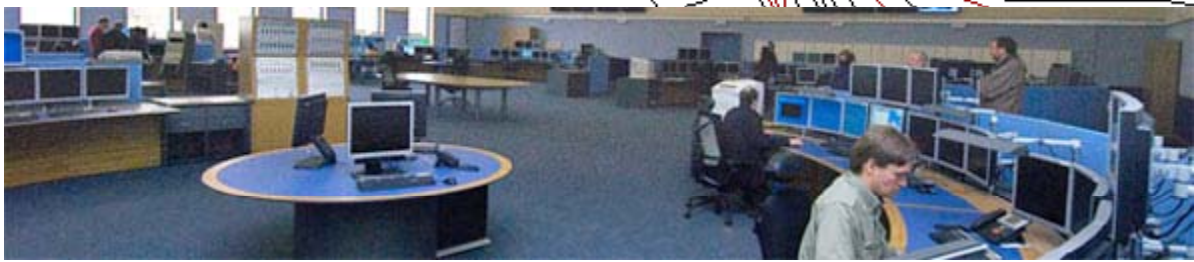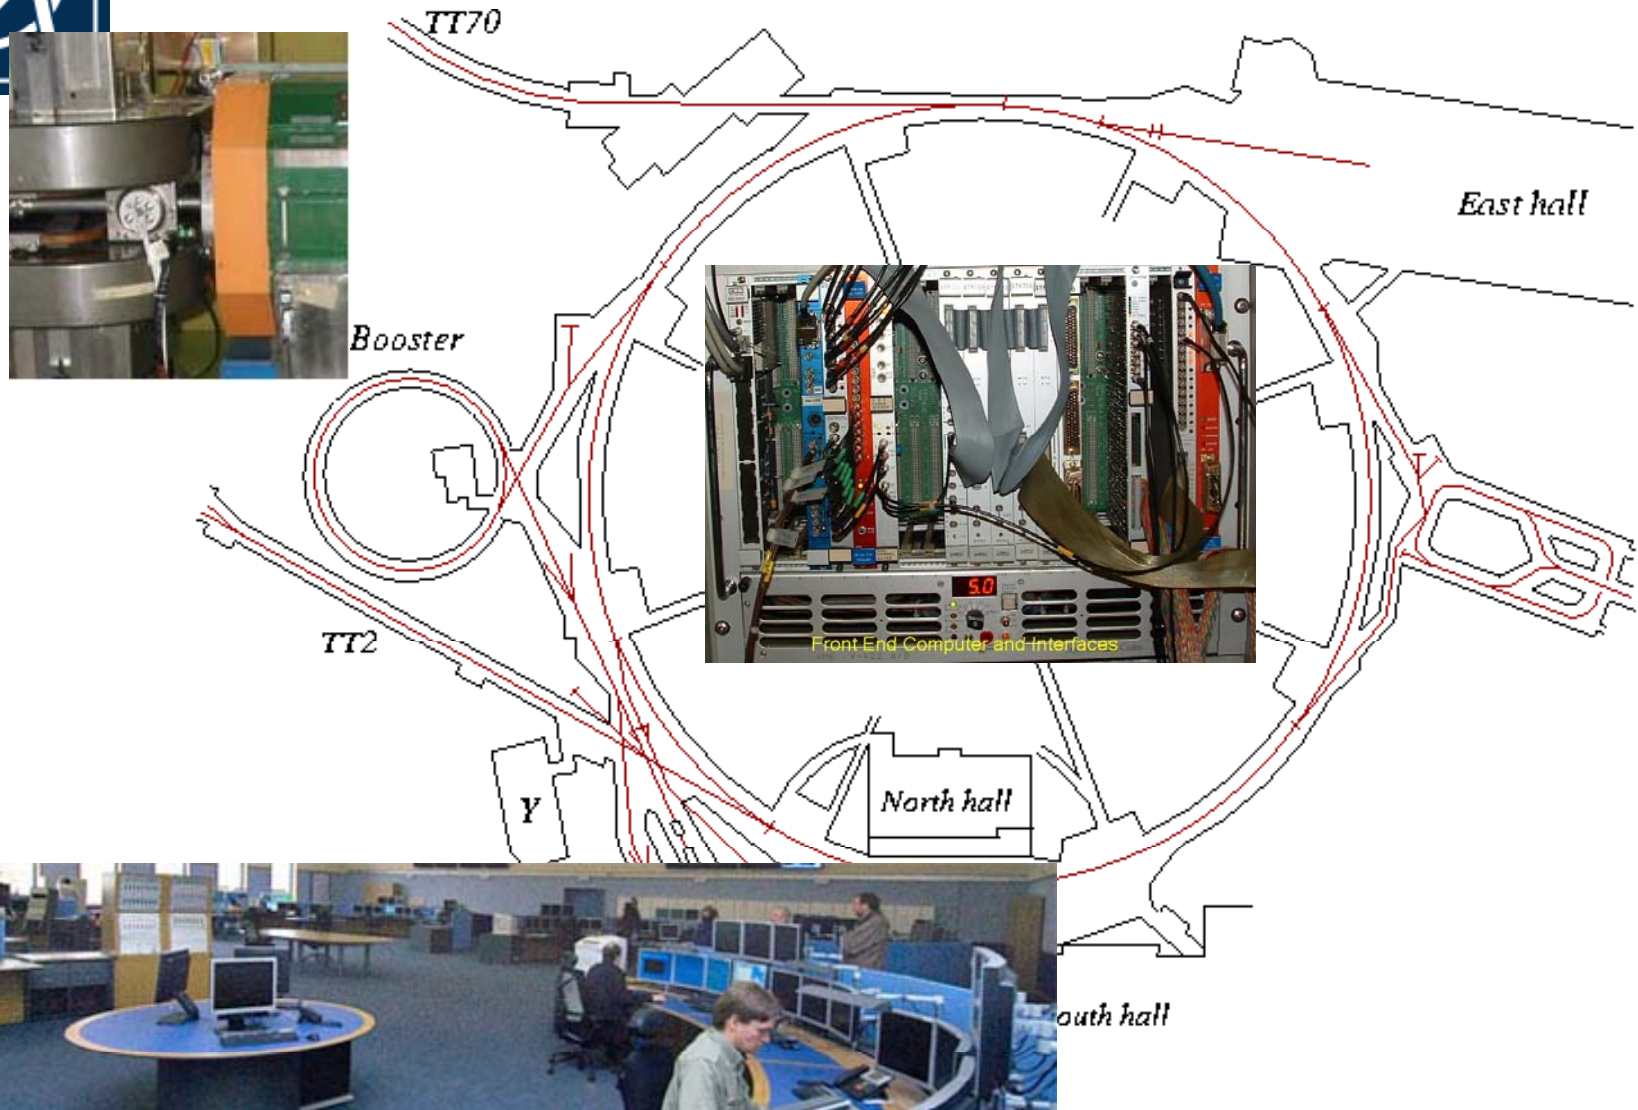

U. Raich CAS Frascati 2008
Beam Diagnostics






Required Competence in a beam diagnostics group

- Some beam physics in order to understand the beam parameters to be measured and to distinguish beam effects from sensor effects
- Detector physics to understand the interaction of the beam with the sensor
- Mechanics
- Analogue signal treatment
 - Low noise amplifiers
 - High frequency analogue electronics
- Digital signal processing
- Digital electronics for data readout
- Front-end and Application Software



Layout of a Faraday Cup

- Electrode: 1 mm stainless steel
- Only low energy particles can be measured
- Very low intensities (down to 1 pA) can be measured
- Creation of secondary electrons of low energy (below 20 eV)
- Repelling electrode with some 100 V polarisation voltage pushes secondary electrons back onto the electrode

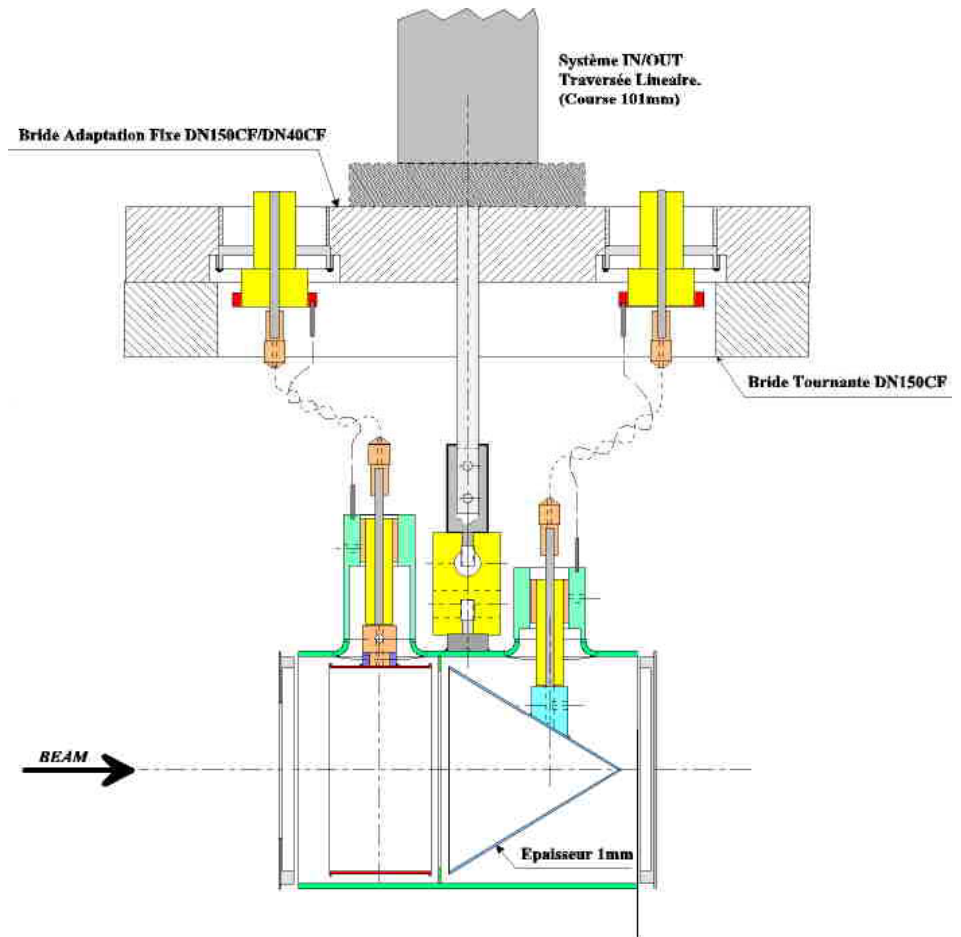




Faraday Cup



U. Raich CAS Frascati 2008
Beam Diagnostics

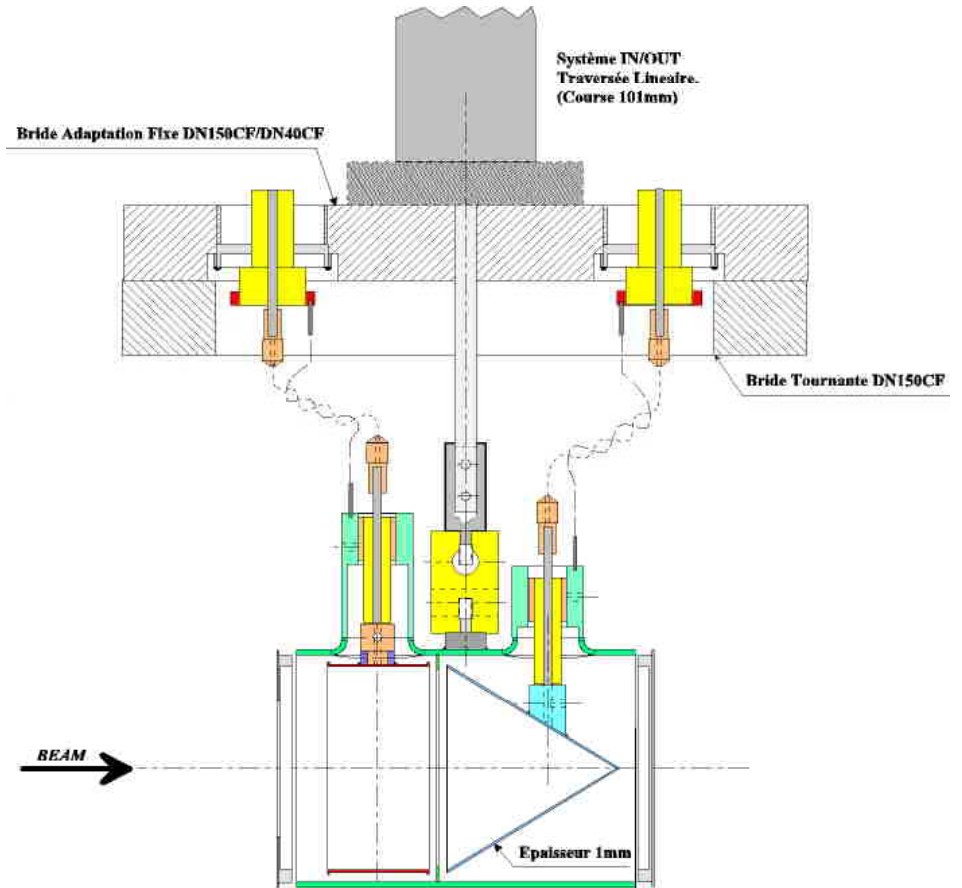




Electro-static Field in Faraday Cup

In order to keep secondary electrons with the cup a repelling voltage is applied to the polarization electrode


Since the electrons have energies of less than 20 eV some 100V repelling voltage is sufficient

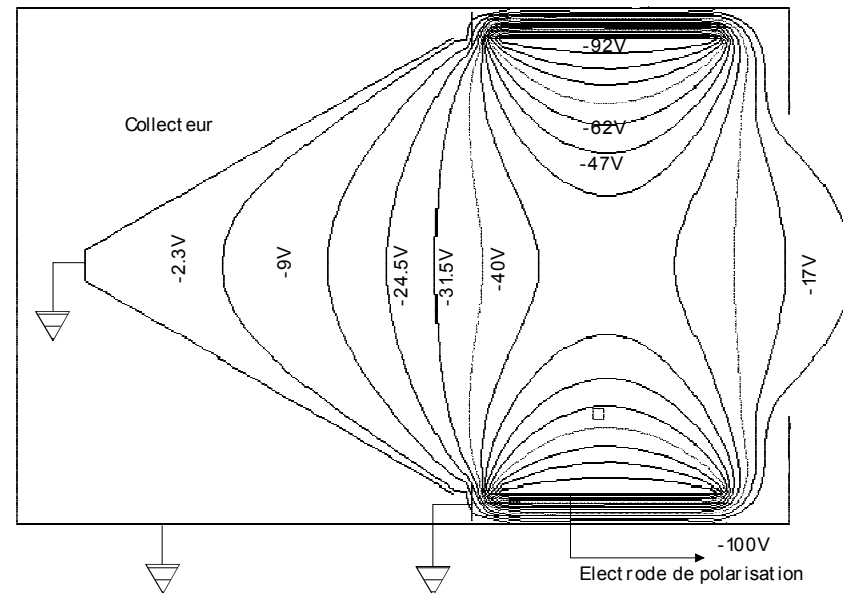




Energy of secondary emission electrons

- With increasing repelling voltage the electrons do not escape the Faraday Cup any more and the current measured stays stable.
- At 40V and above no decrease in the Cup current is observed any more

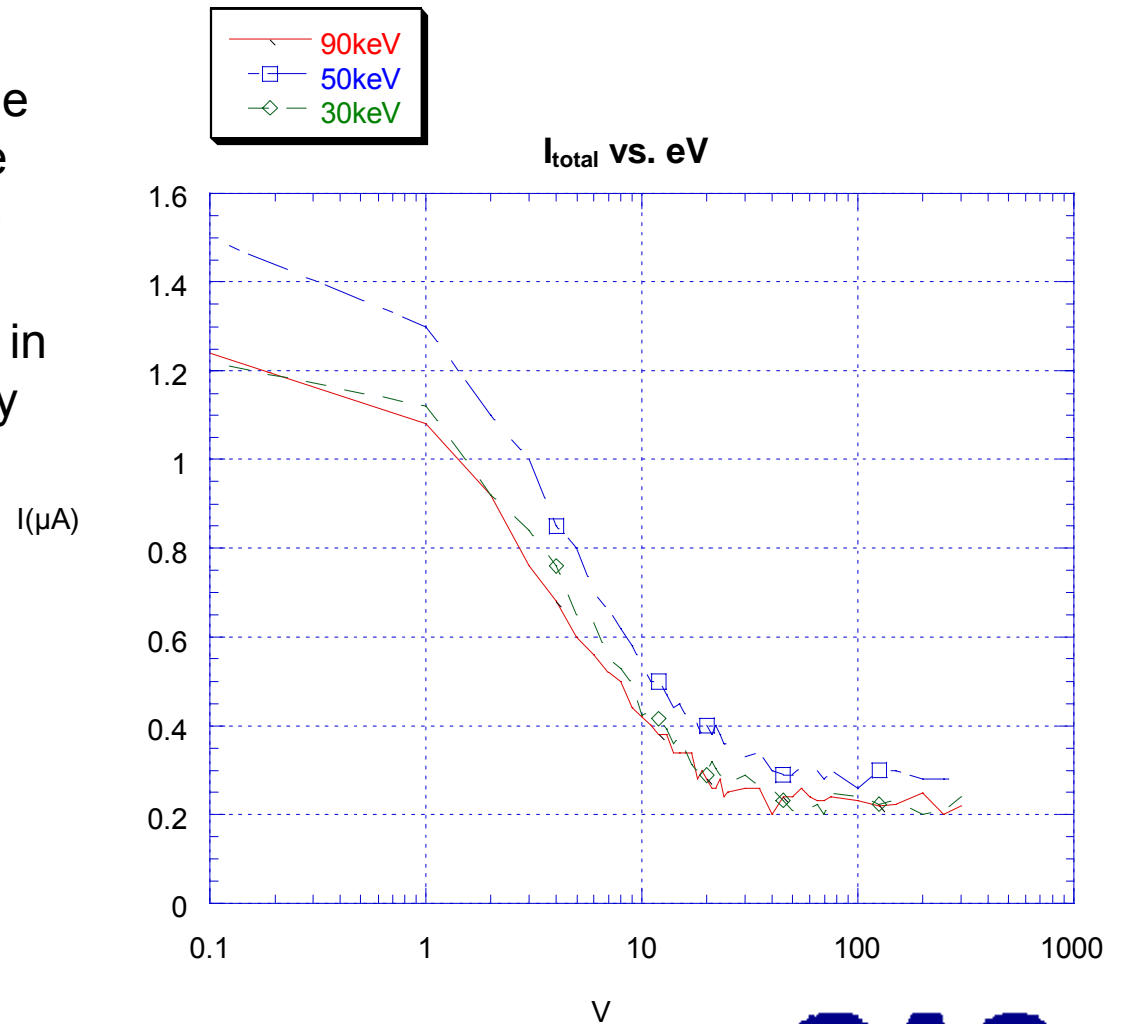




Faraday Cup with water cooling

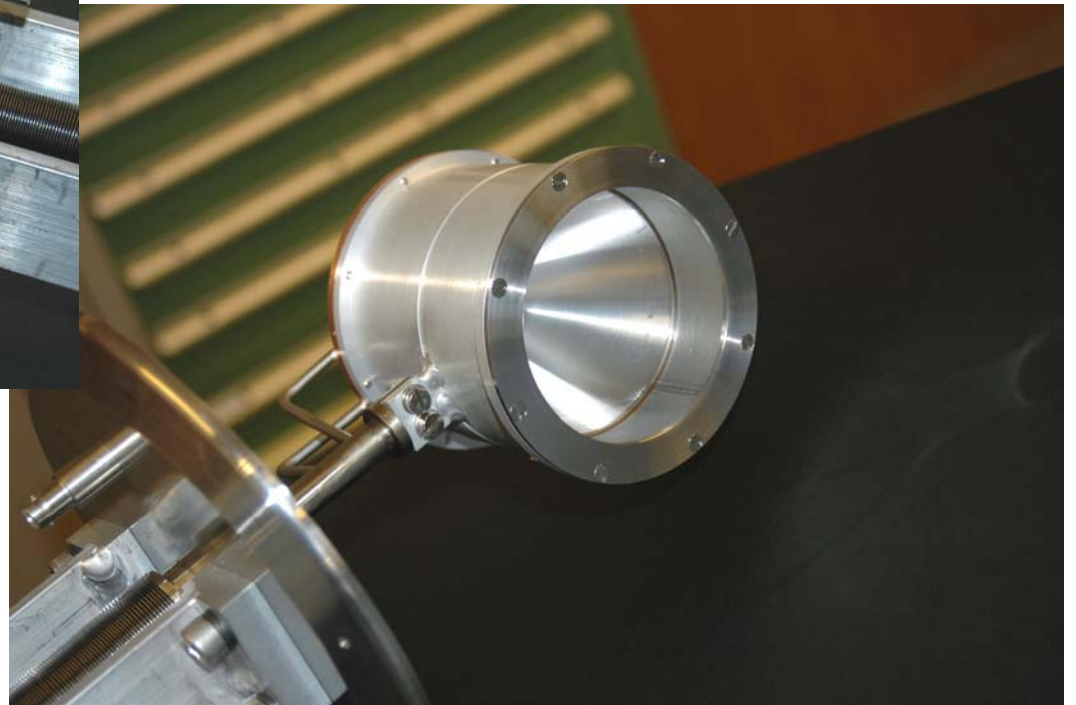

For higher intensities
water cooling may be needed



Current Transformers

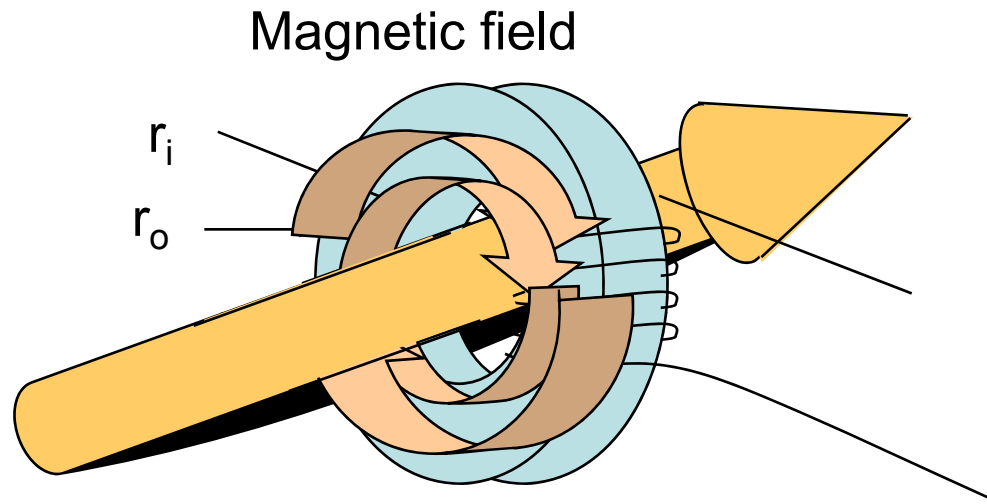

Fields are very low

Capture magnetic field lines with cores of high relative permeability

(CoFe based amorphous alloy Vitrovac: $\mu_r = 10^5$)

Beam current


$$I_{\text{beam}} = \frac{qeN}{t} = \frac{qeN\beta c}{l}$$

$$L = \frac{\mu_0 \mu_r}{2\pi} l N^2 \ln \frac{r_o}{r_i}$$




The Pickoff Transformer

$$U(V) \equiv I_{beam} \frac{dI_{beam}}{dt} \frac{R}{N} e^{-\frac{t}{\tau_{drop}}}$$

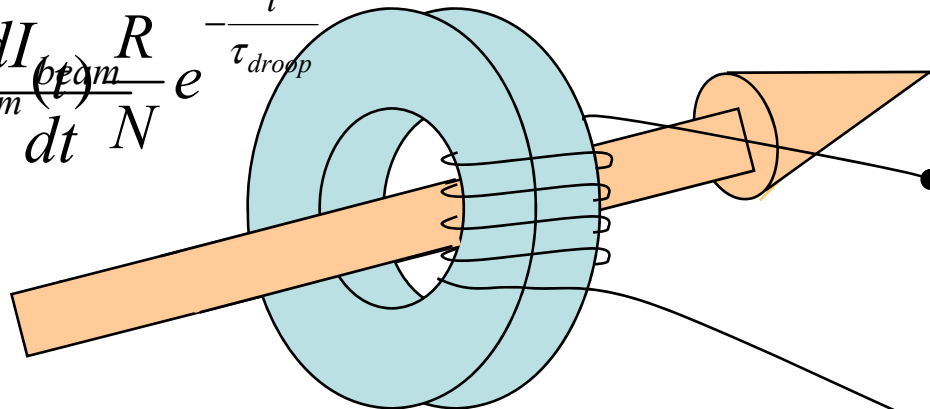



Inductance L of the winding

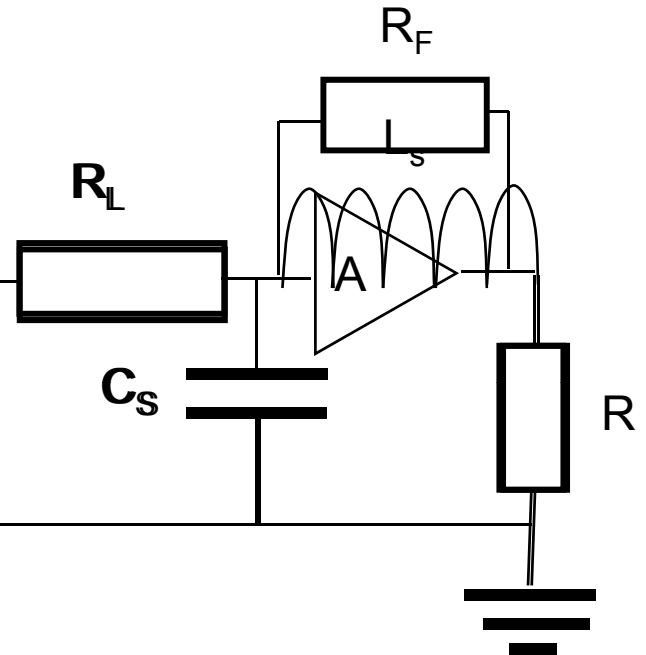

Transformer output signal


$$\tau_{rise} = \sqrt{L_s C_s}$$

$$\tau_{drop} = \frac{L_L}{\frac{R}{A} + R_L} \approx \frac{L}{R_L}$$

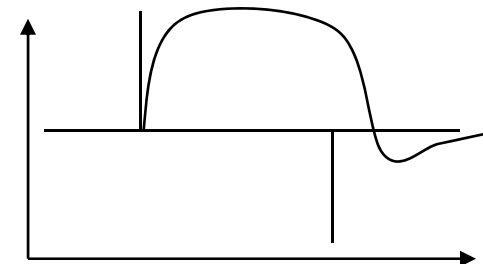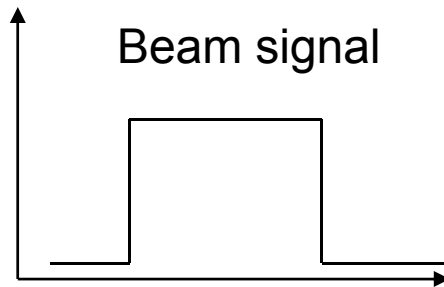



Principle of a fast current transformer

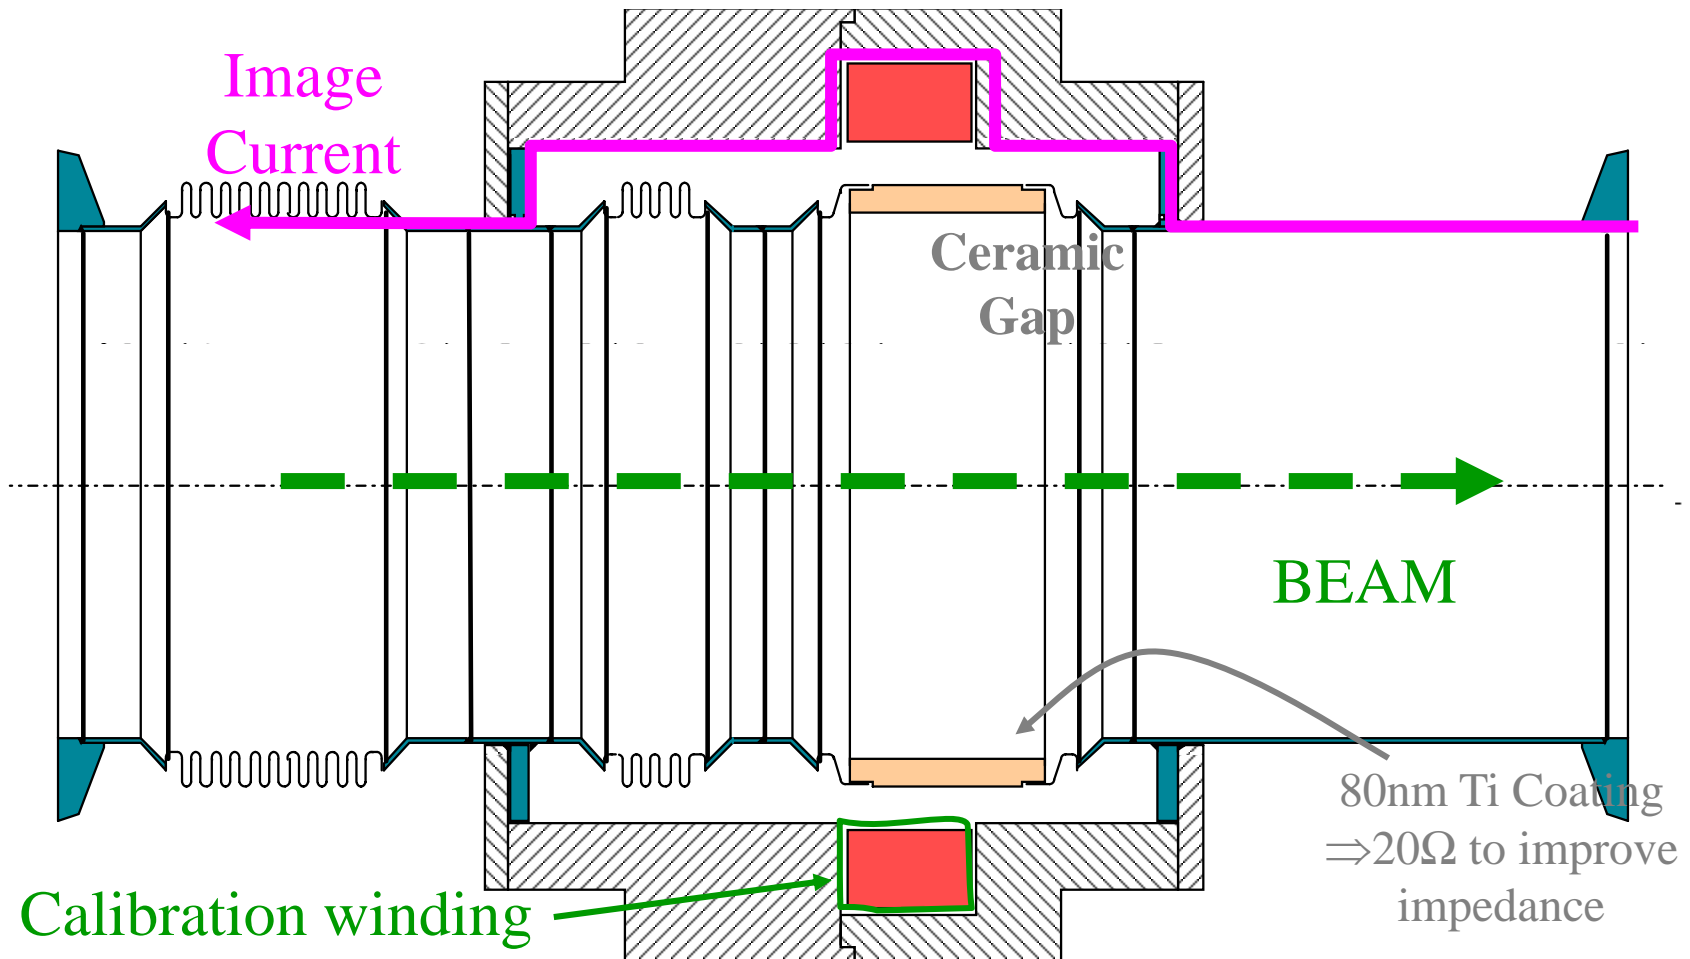

- 500MHz Bandwidth
- Low droop ($< 0.2\%/μs$)



U. Raich CAS Frascati 2008
Beam Diagnostics


15

Diagram by H. Jakob

THE CERN ACCELERATOR SCHOOL



Fast current transformers for the LHC

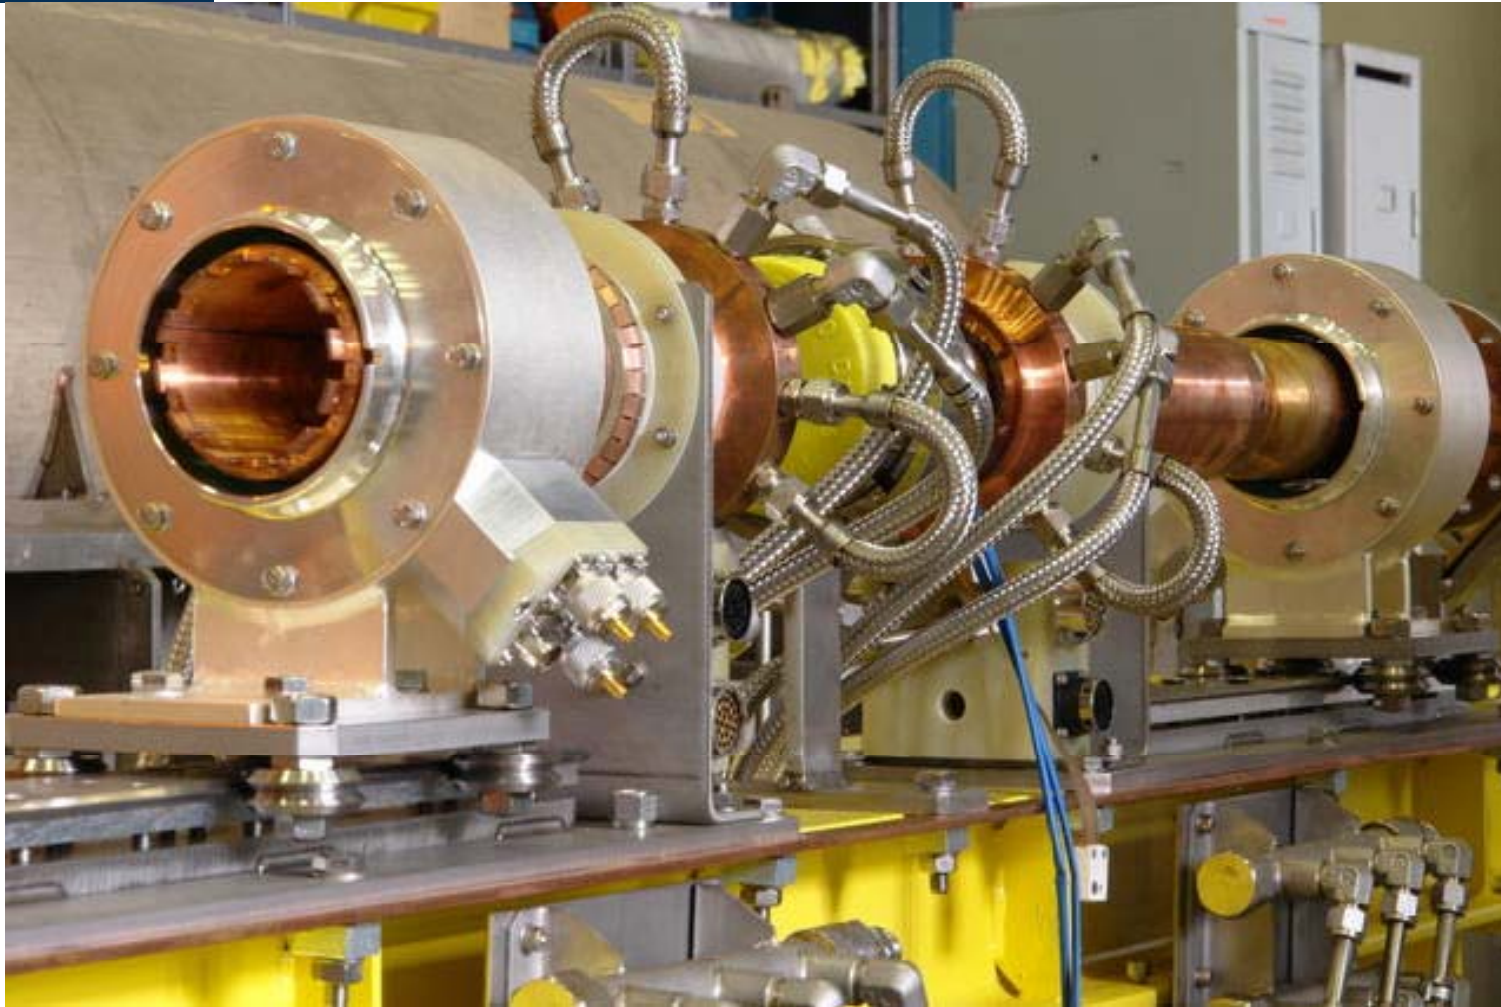

U. Raich CAS Frascati 2008
Beam Diagnostics


16

CAS

THE CERN ACCELERATOR SCHOOL



The transformer installed in the machine

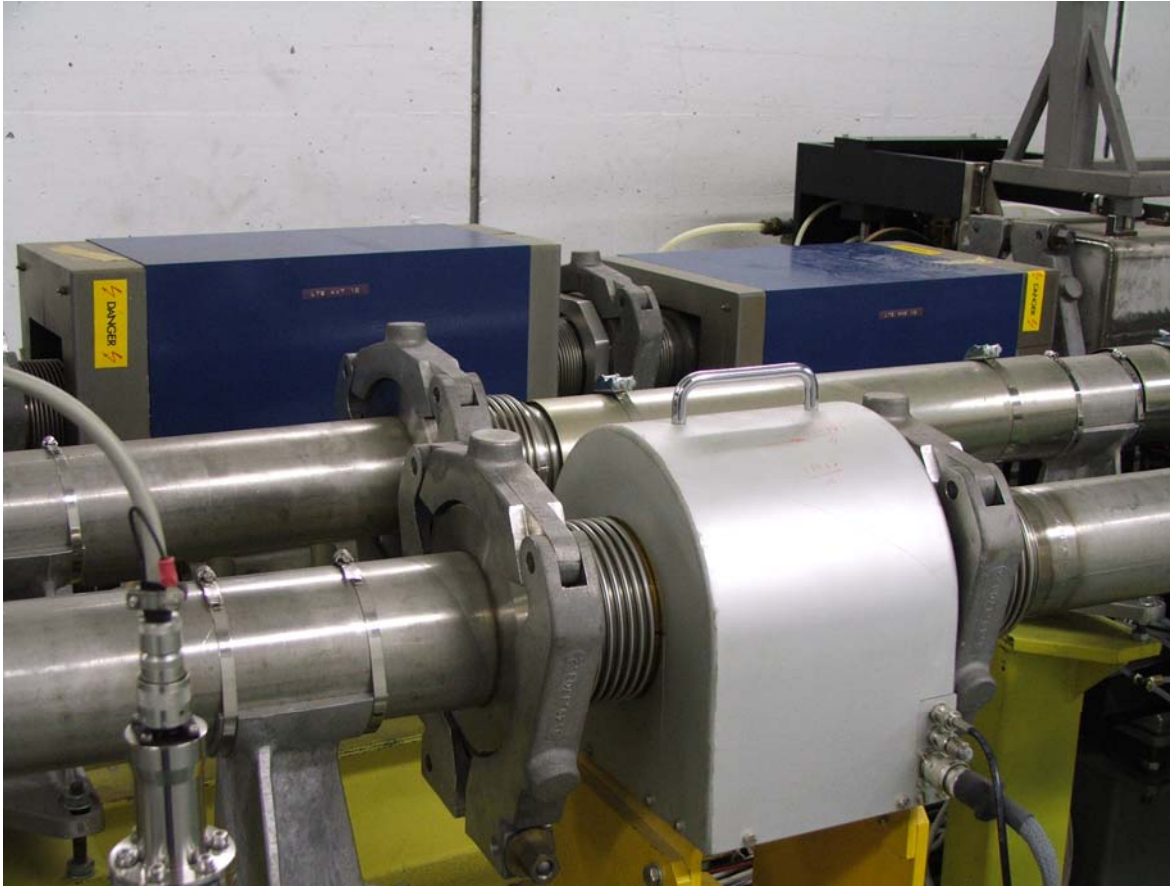


Needs
Magnetic Shielding




Magnetic shielding

- Shield should extend along the vacuum chamber length $>$ diameter of opening
- Shield should be symmetrical to the beam axis
- Air gaps must be avoided especially along the beam axis
- Shield should have highest μ possible but should not saturate

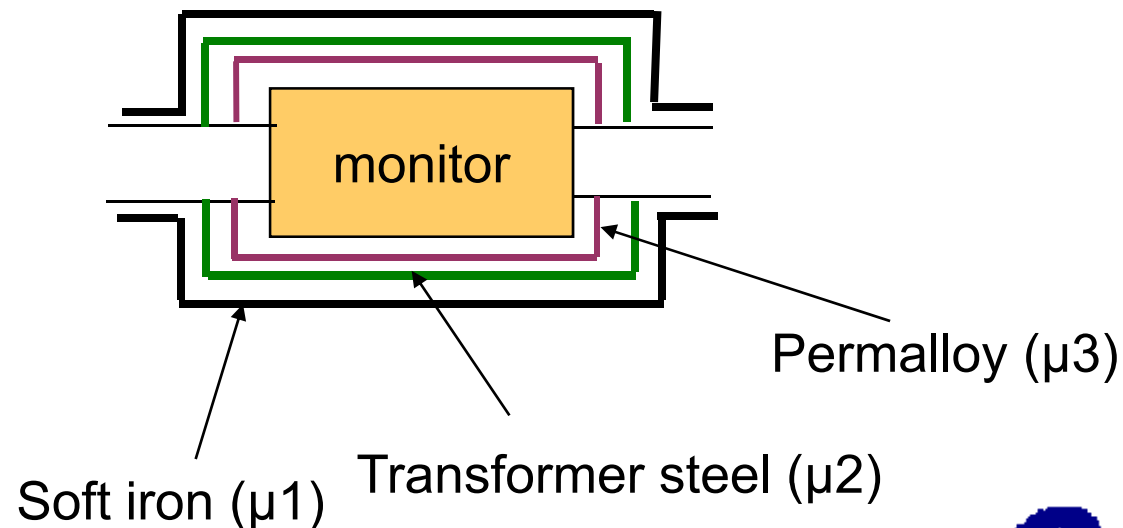




Calibration of AC current transformers

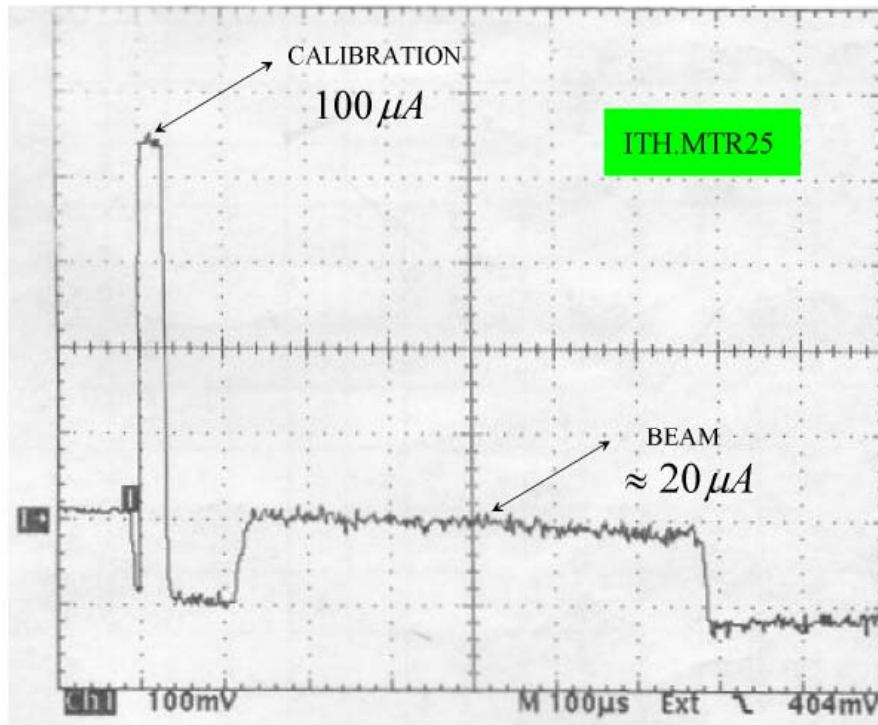

- The transformer is calibrated with a very precise current source
- The calibration signal is injected into a separate calibration winding
- A calibration procedure executed before the running period
- A calibration pulse before the beam pulse measured with the beam signal




Current transformer and its electronics

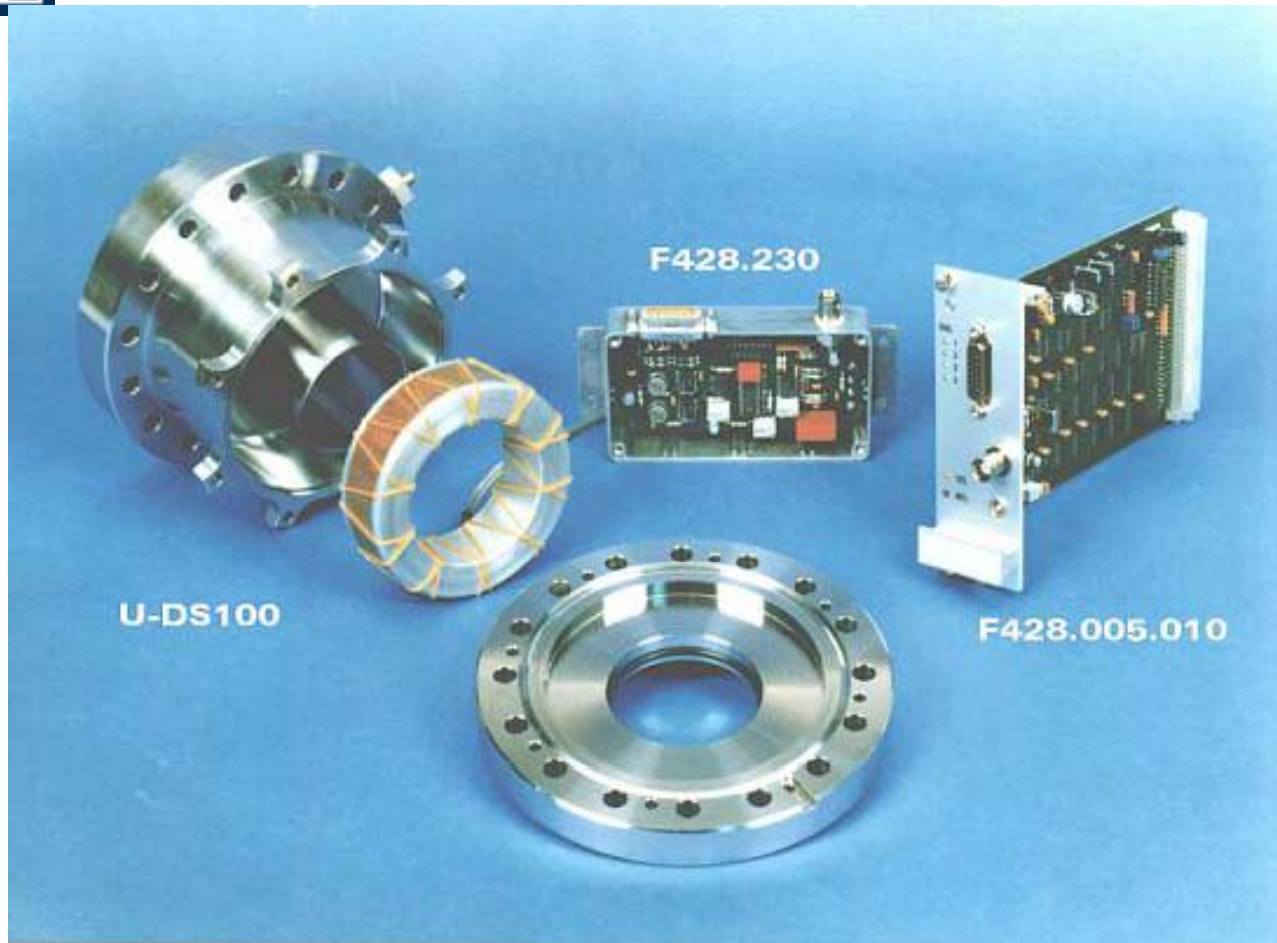



Display of transformer readings


- Transformers in a transfer line
- Calculated losses trigger a *watchdog*
- Display distributed via video signal

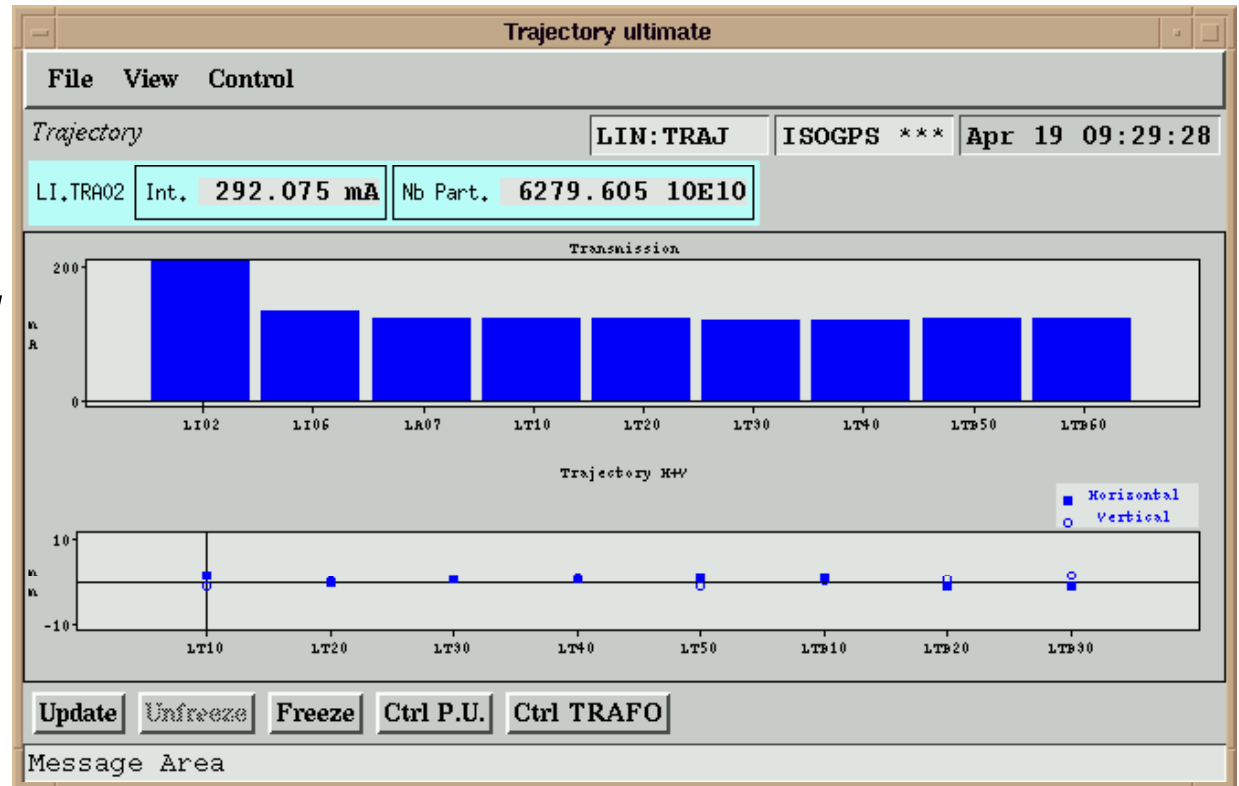




The DC current transformer

- AC current transformer can be extended to very long droop times but not to DC
- Measuring DC currents is needed in storage rings
- Must provide a modulation frequency
- Takes advantage of non/linear magnetisation curve

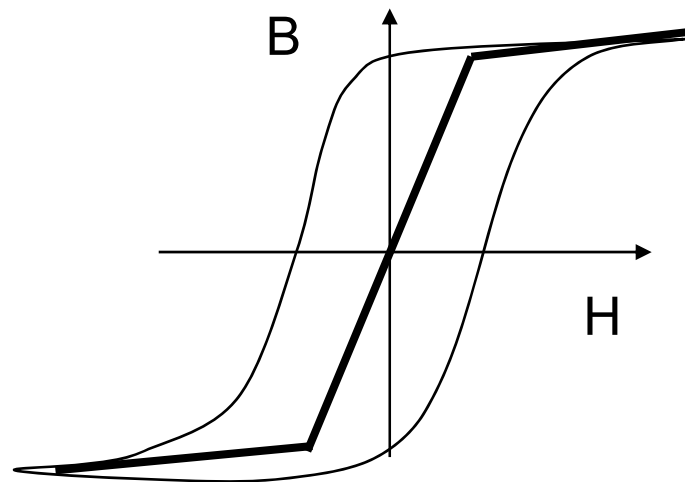




Principle of DCCT

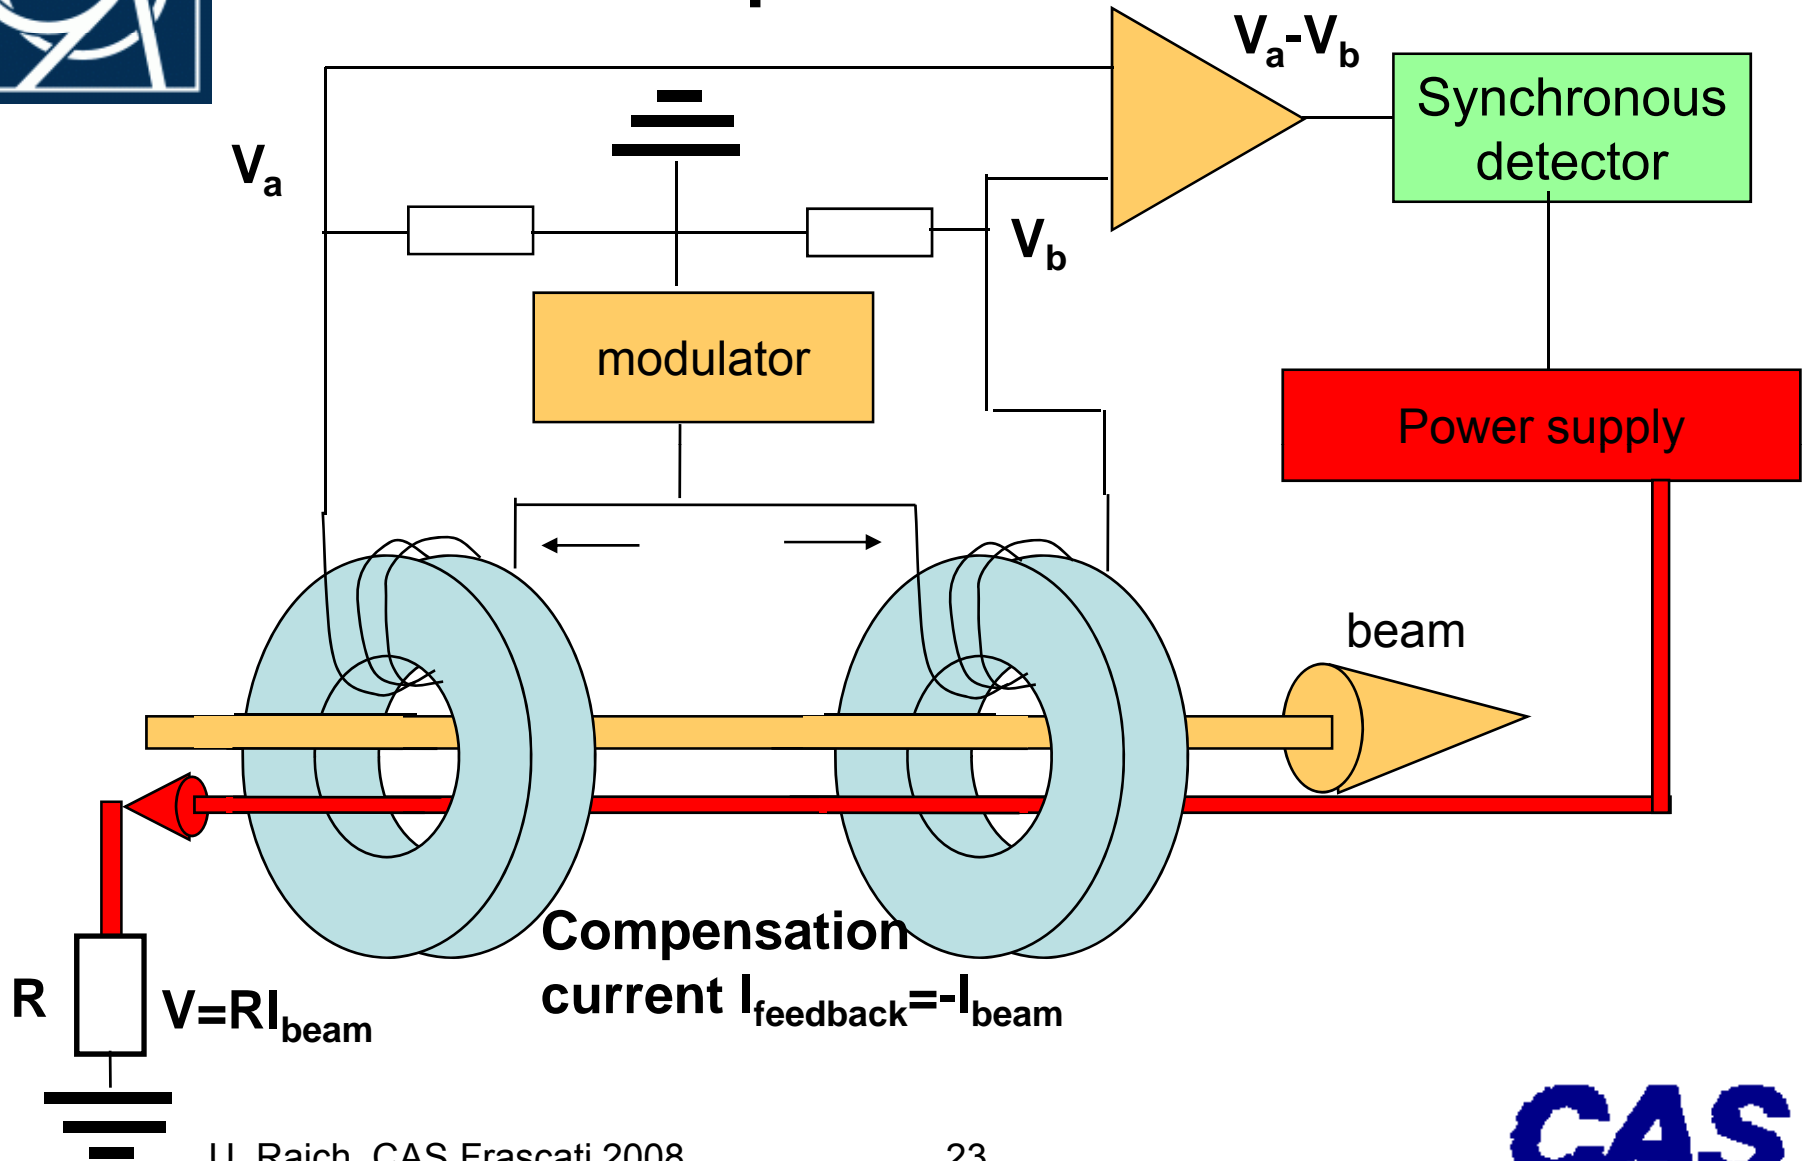



Modulation of a DCCT without beam

$$B=f(t)$$

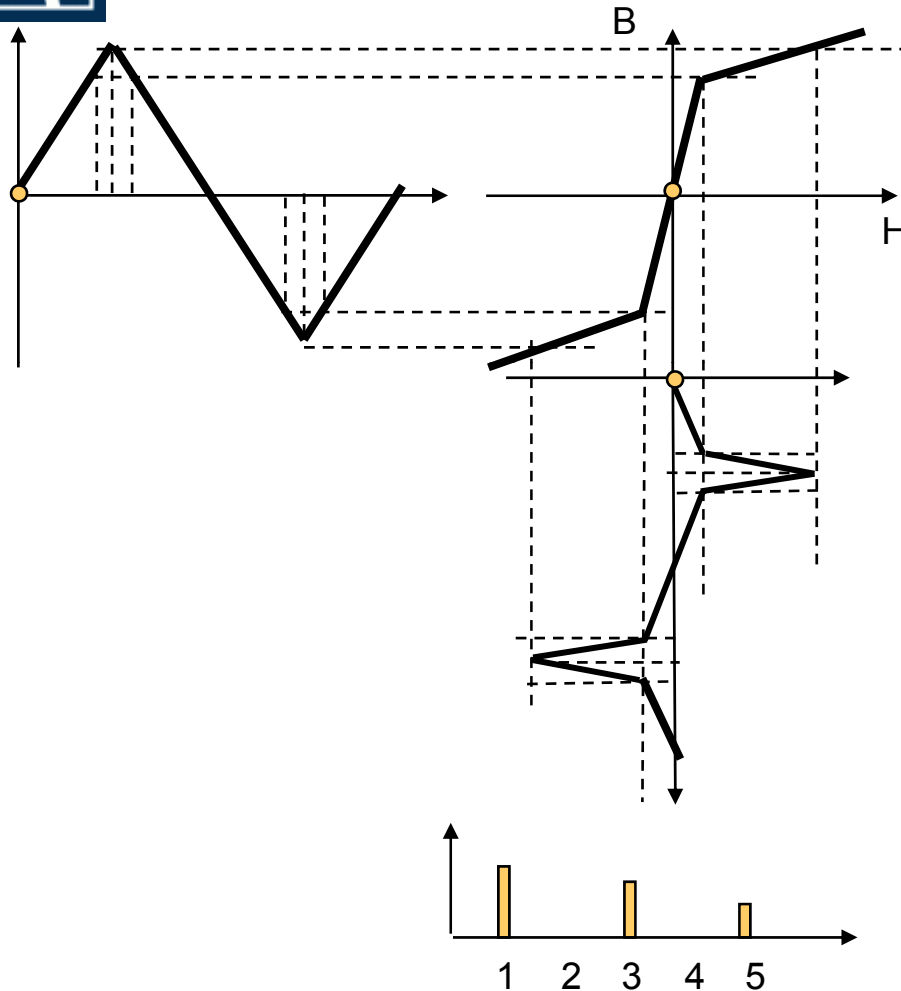


$$U = NA \frac{dB}{dt}$$

$$B = \frac{\int U dt}{NA} + B_0$$

Modulation current has only odd harmonic frequencies since the signal is symmetric



Modulation of a DCCT with beam

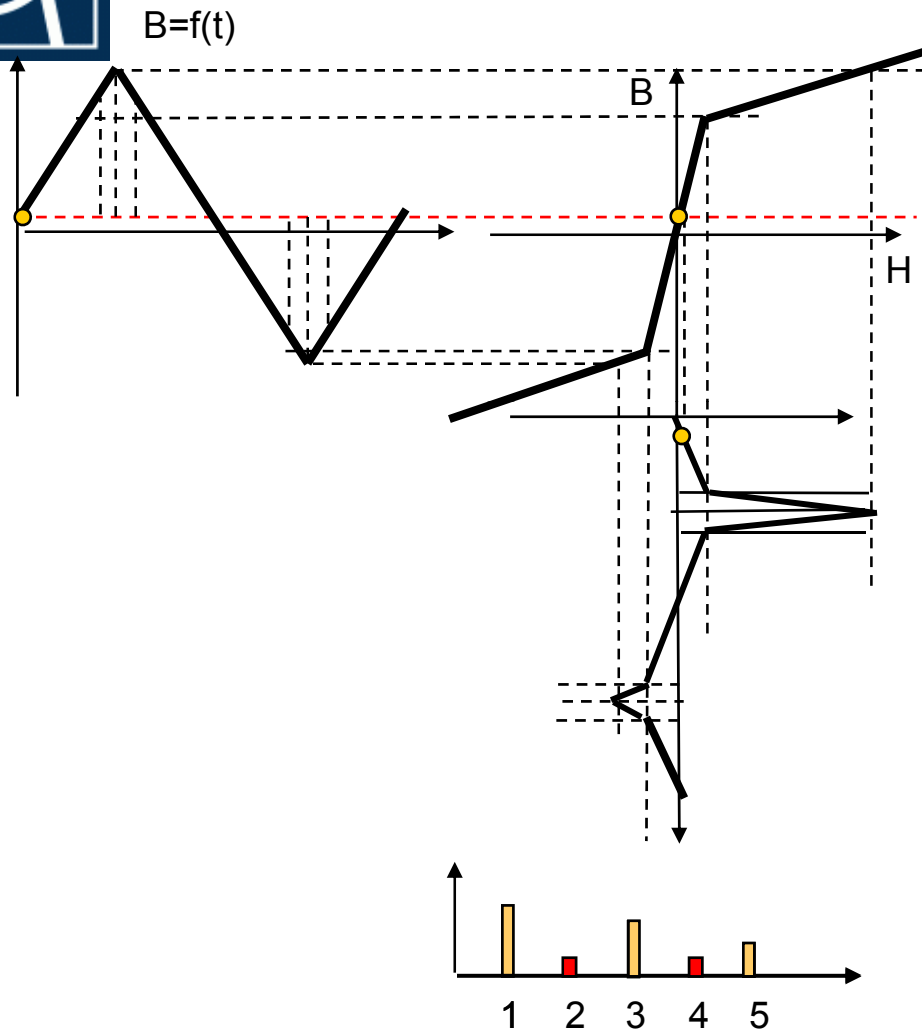

Sum signal becomes non-zero
Even harmonics appear



Modulation current difference signal with beam

- Difference signal has $2\omega_m$
- ω_m typically 200 Hz – 10 kHz
- Use low pass filter with $\omega_c \ll \omega_m$
- Provide a 3rd core, normal AC transformer to extend to higher frequencies

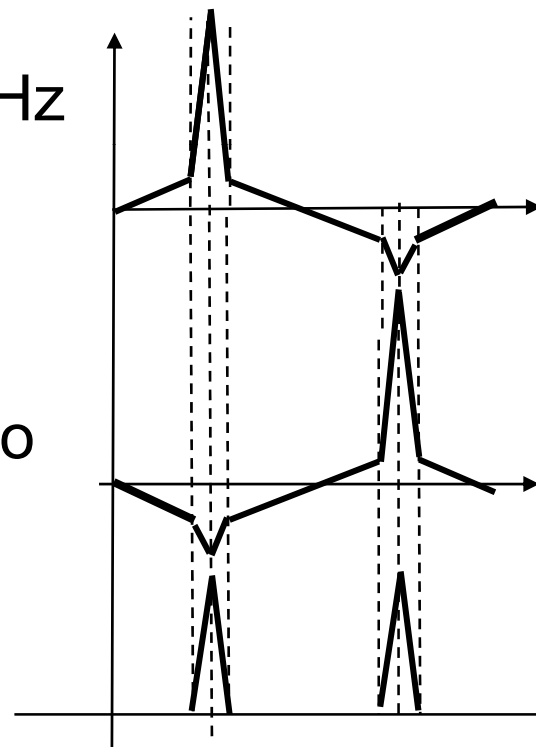




Photo of DCCT internals



U. Raich CAS Frascati 2008
Beam Diagnostics


27

CAS

THE CERN ACCELERATOR SCHOOL




Measuring Beam Position – The Principle

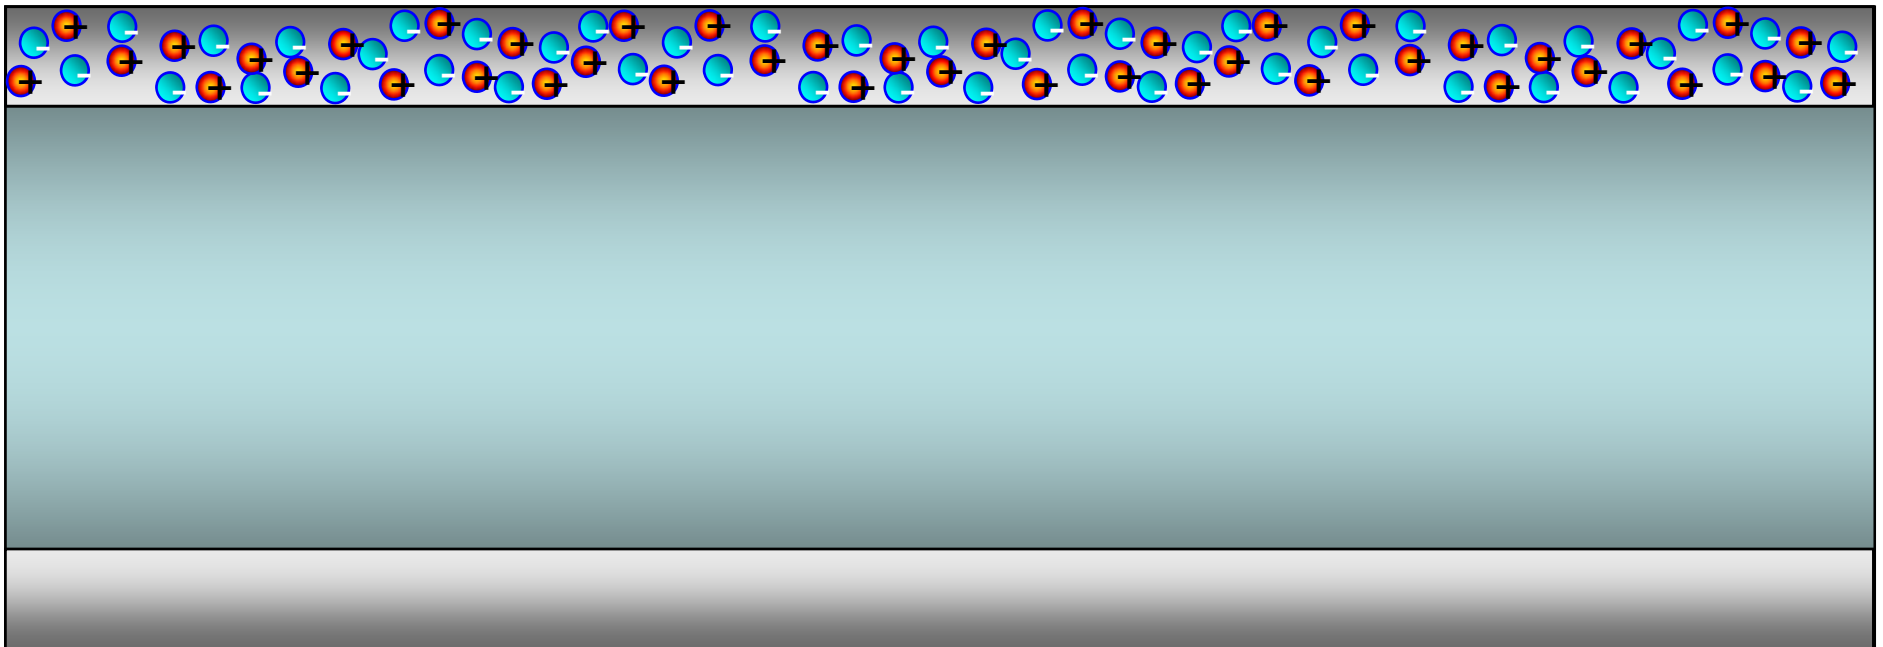





Wall Current Monitor – The Principle

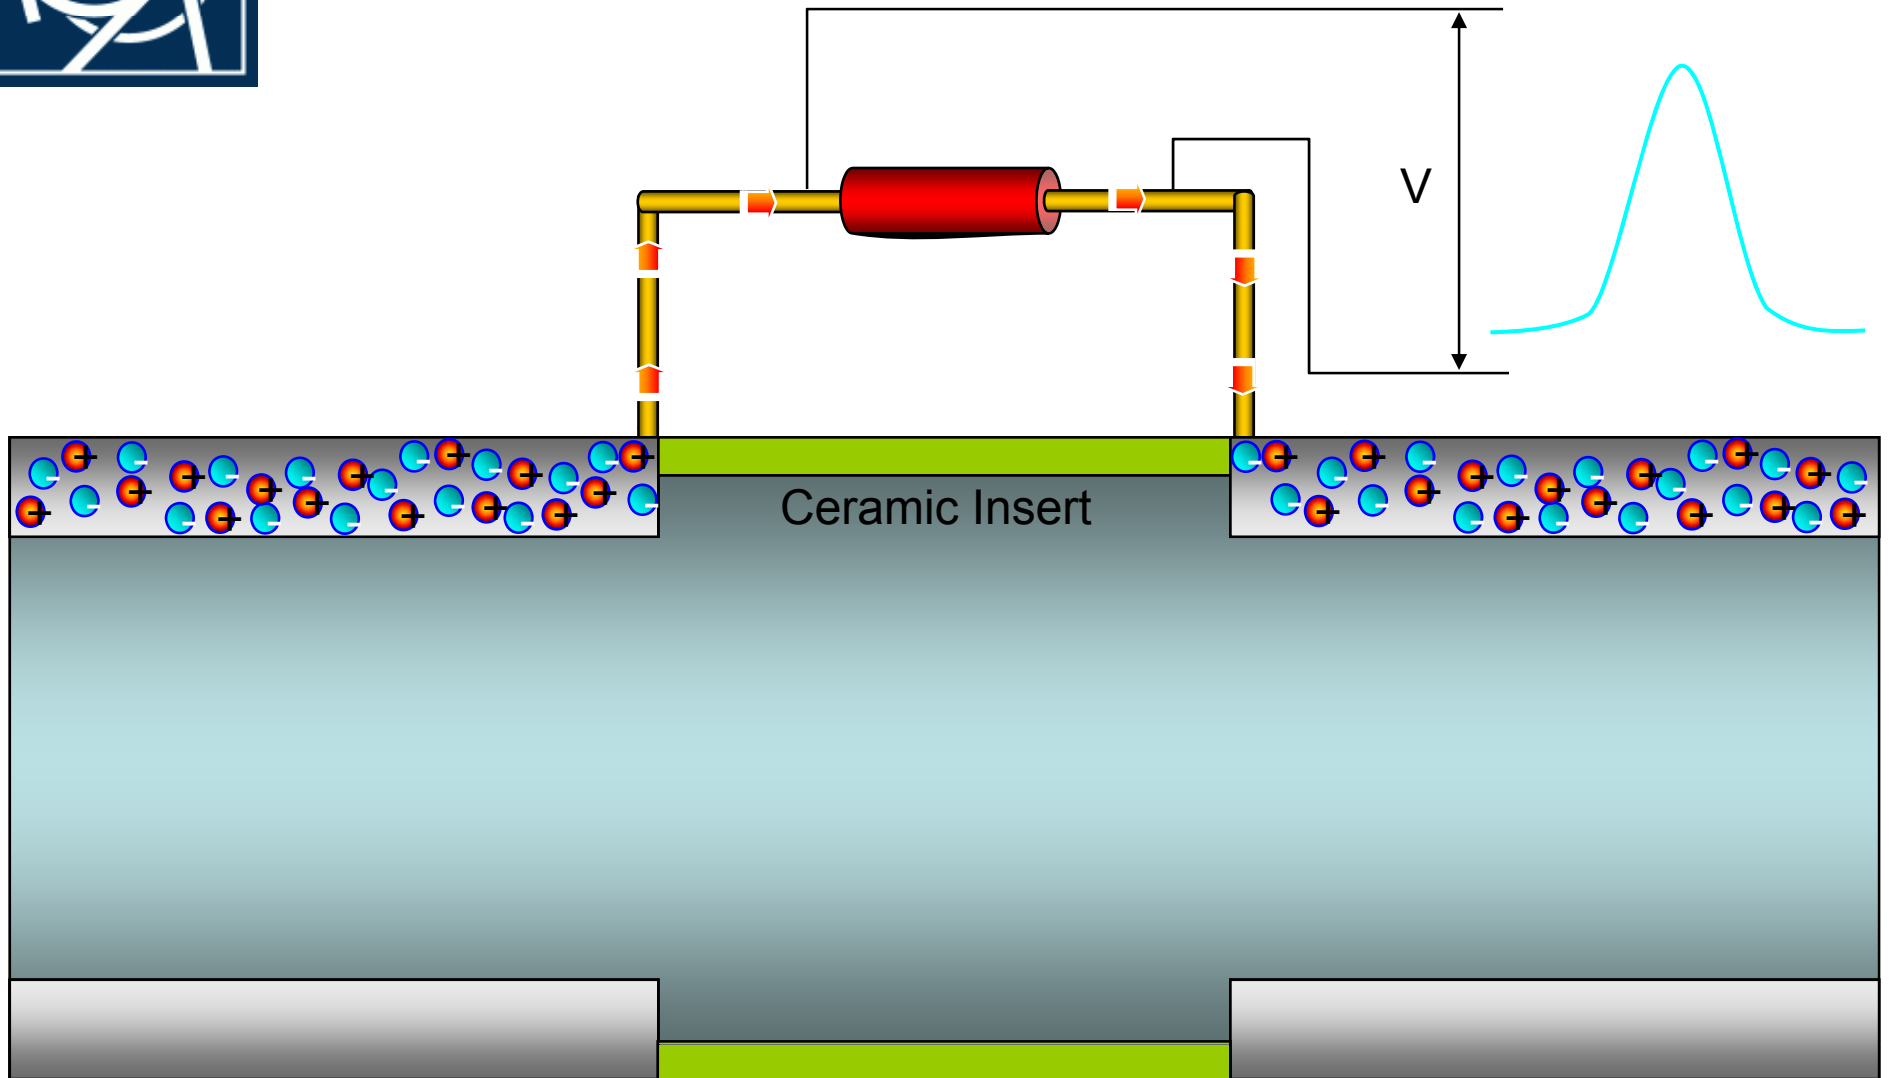




Wall Current Monitor – Beam Response

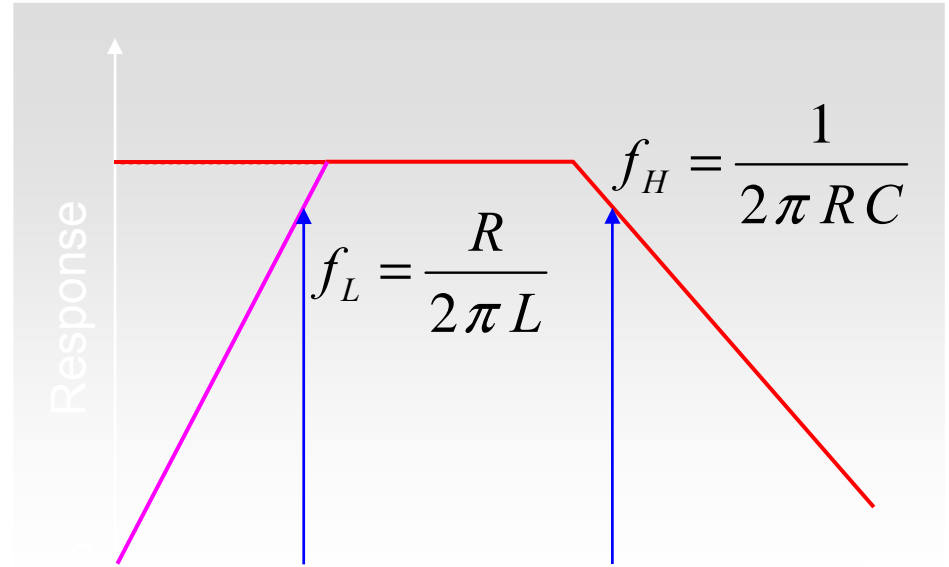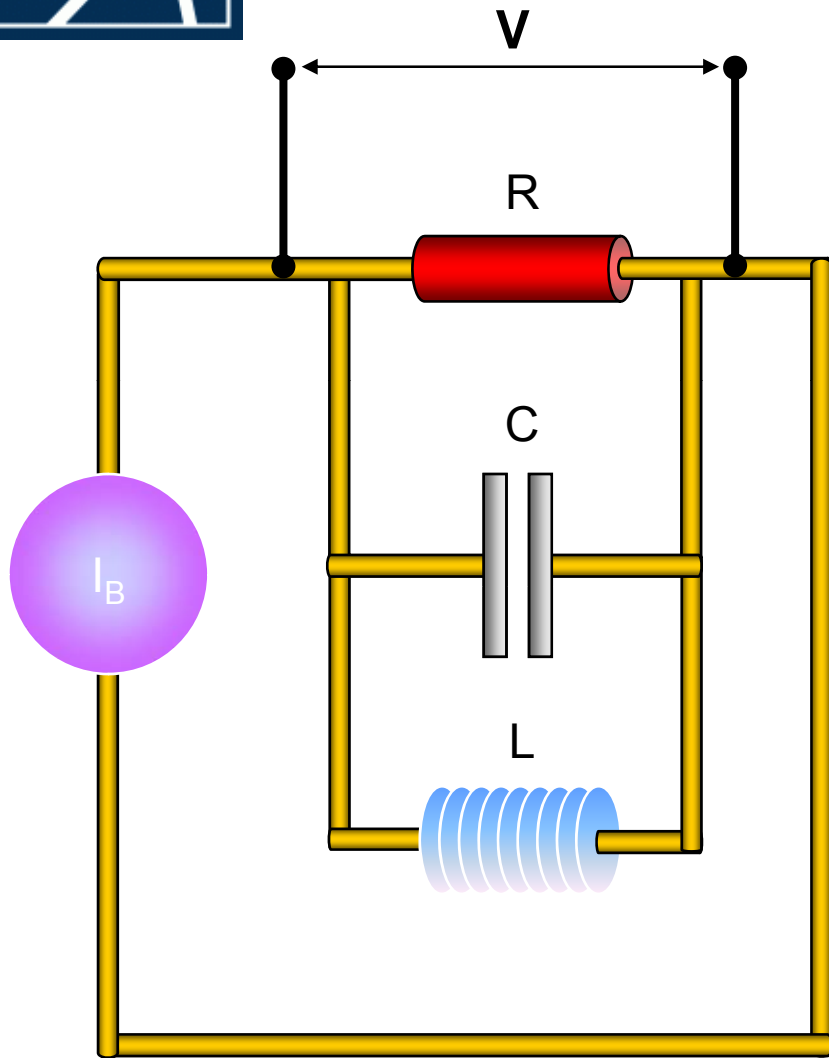


U. Raich CAS Frascati 2008
Beam Diagnostics

30

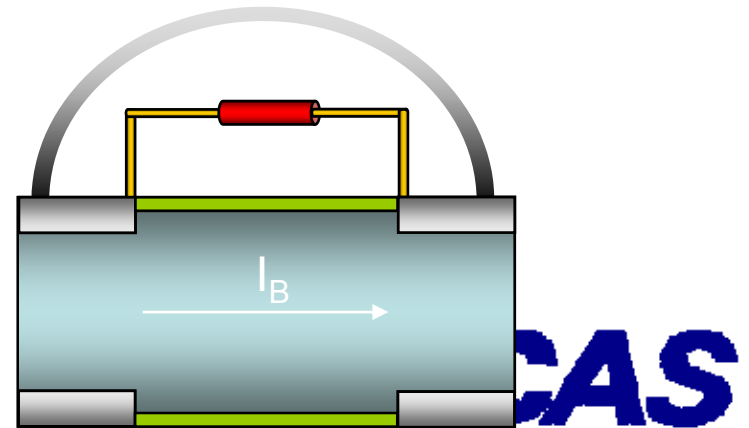




Electrostatic Monitor – The Principle


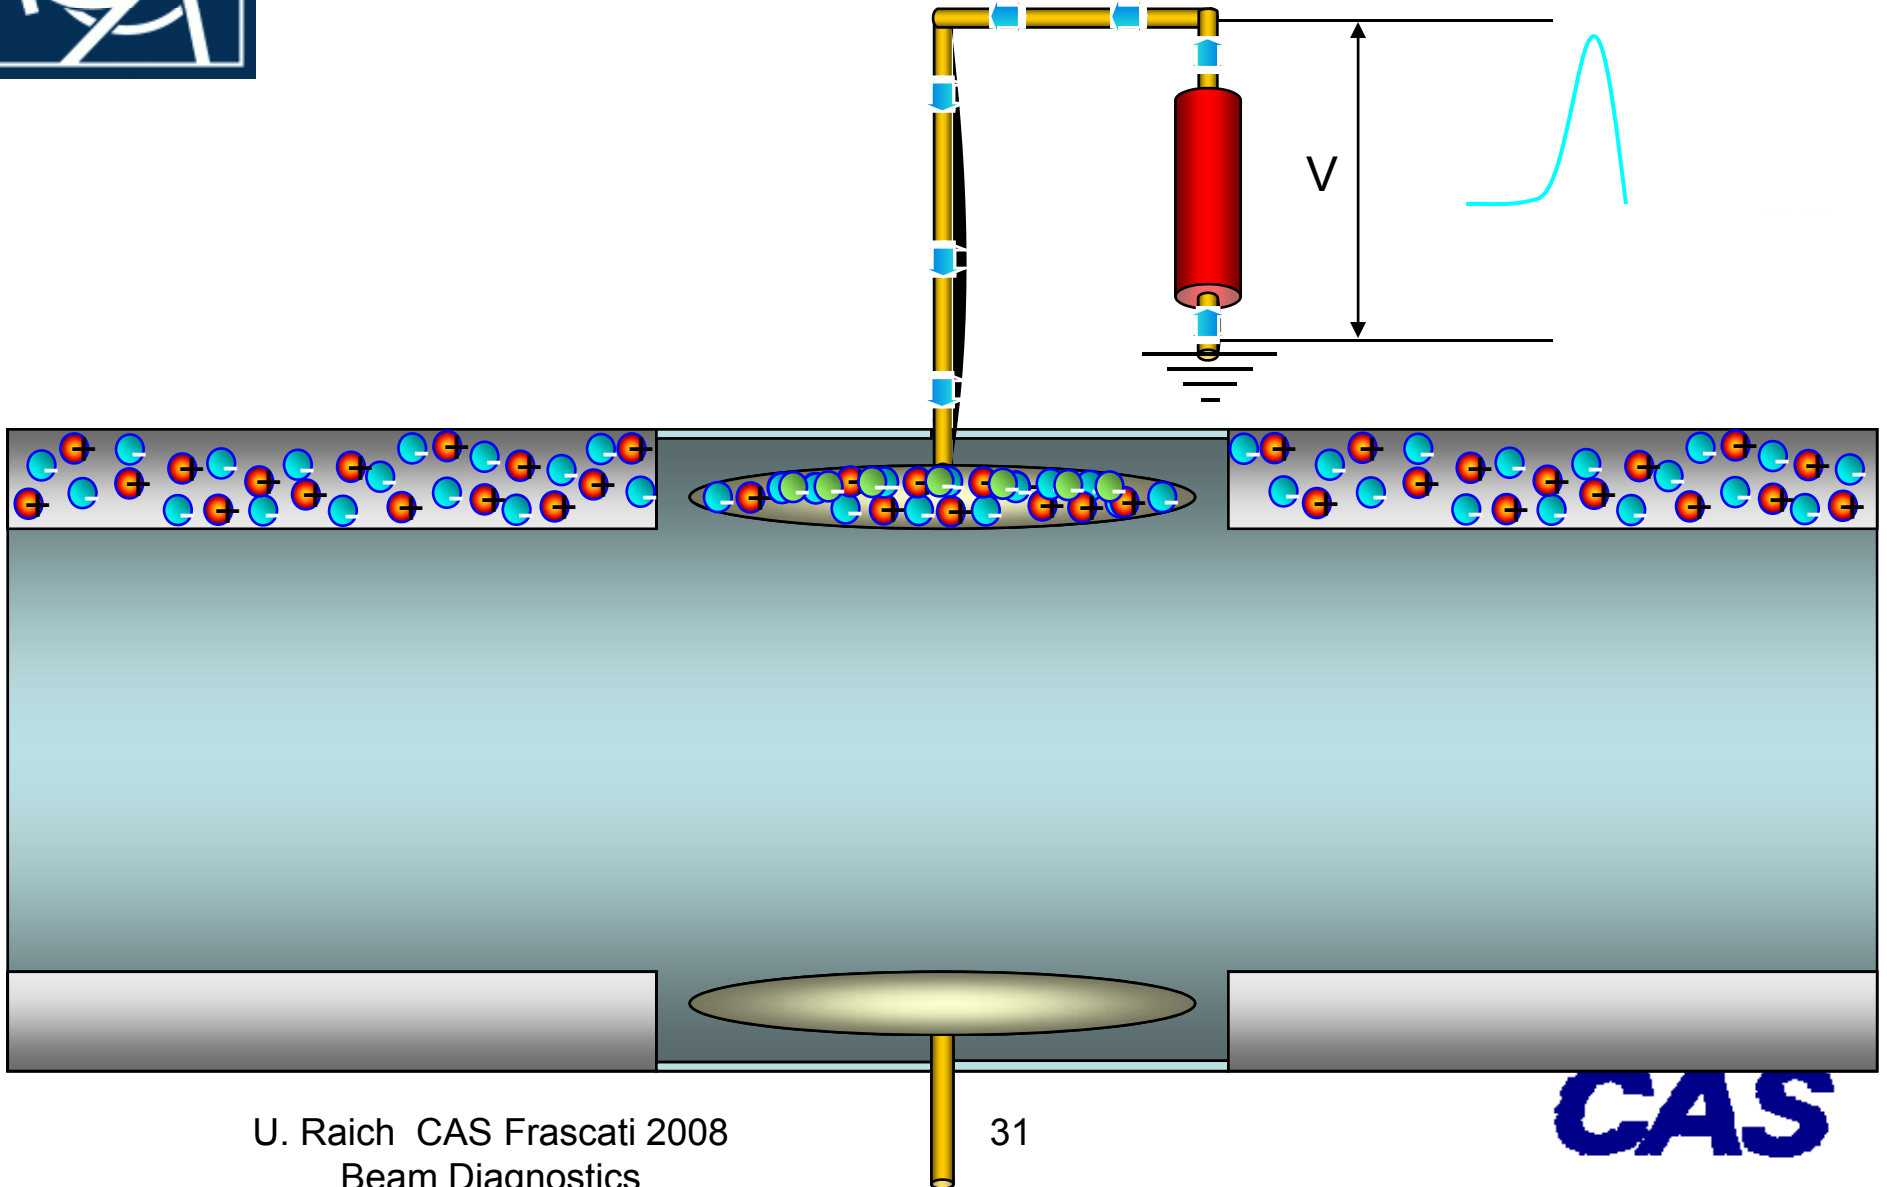




Electrostatic Monitor – Beam Response

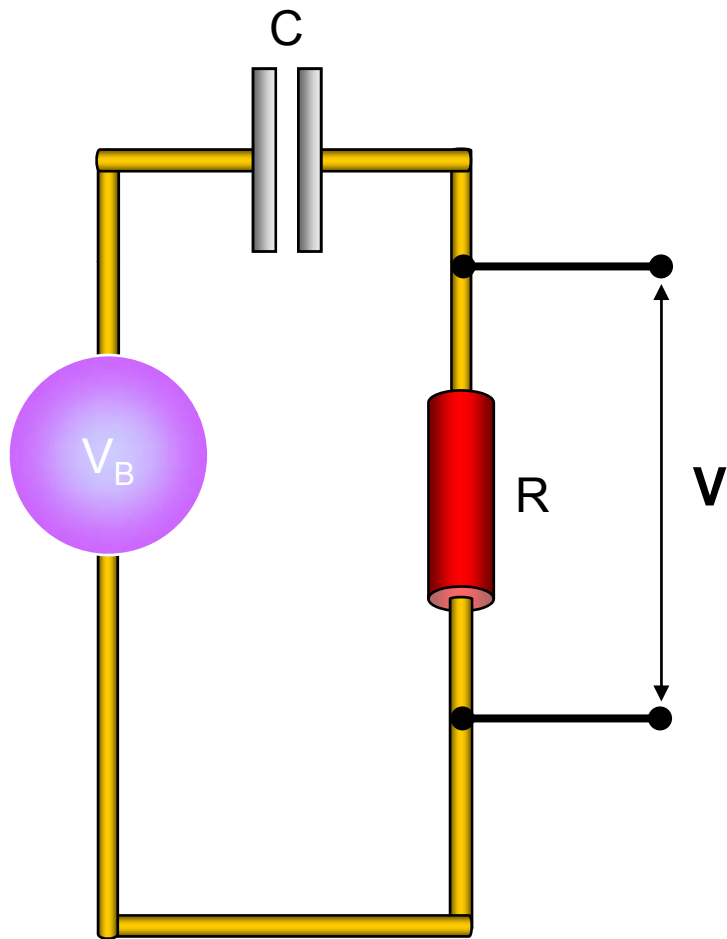

U. Raich CAS Frascati 2008
Beam Diagnostics

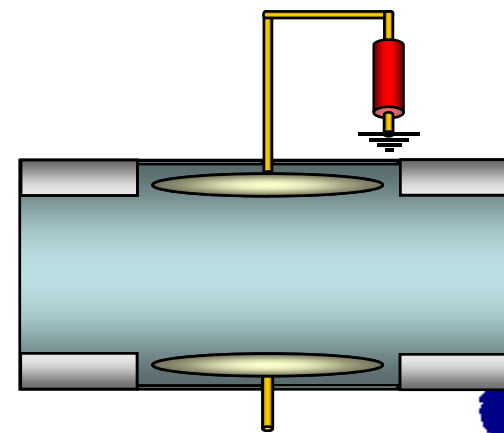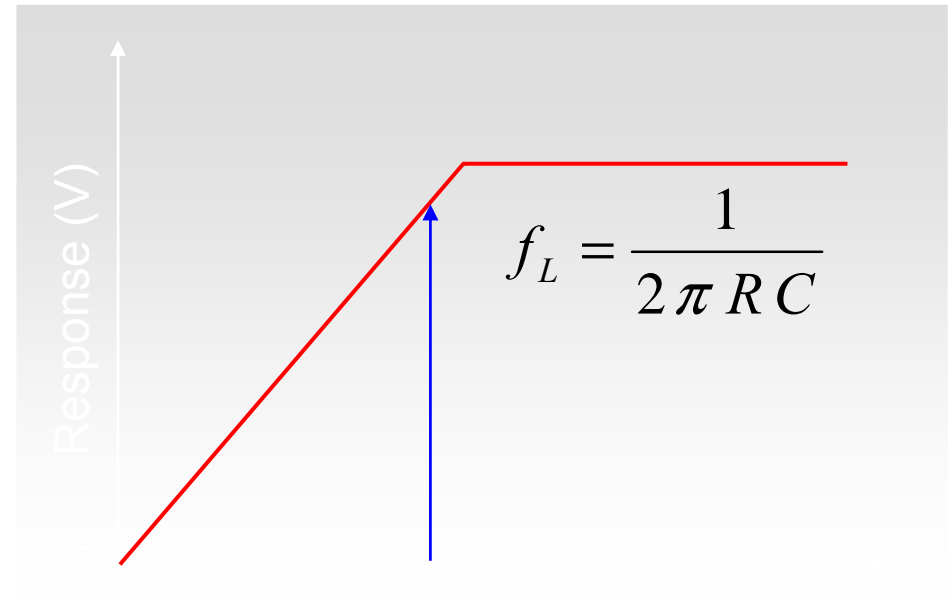


32

CAS

THE CERN ACCELERATOR SCHOOL




Position measurements

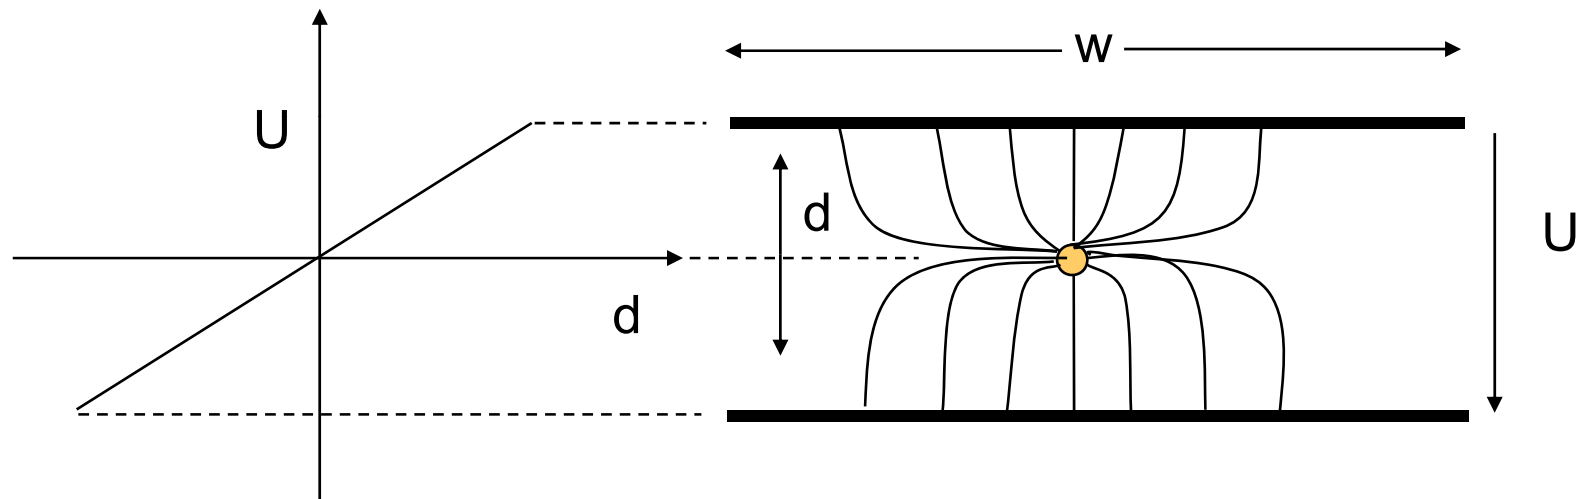


If the beam is much smaller than w , all field lines are captured and U is a linear function with replacement
else: Linear cut (projection to measurement plane must be linear)



Shoebox pick-up

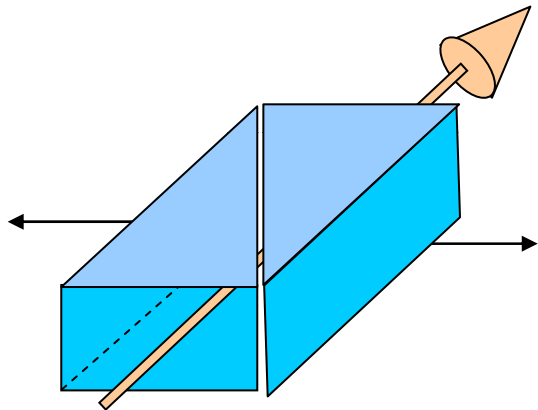

Linear cut through a shoebox

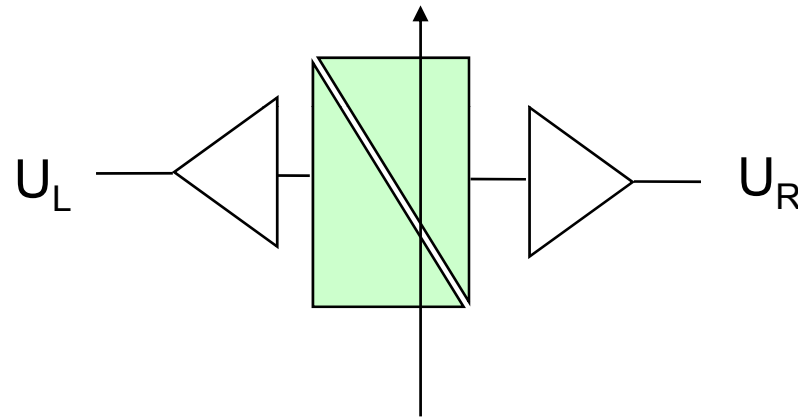


$$X \propto \frac{U_L - U_R}{U_L + U_R} = \frac{\Delta}{\Sigma}$$



Doubly cut shoebox


- Can measure horizontal and vertical position at once
- Has 4 electrodes

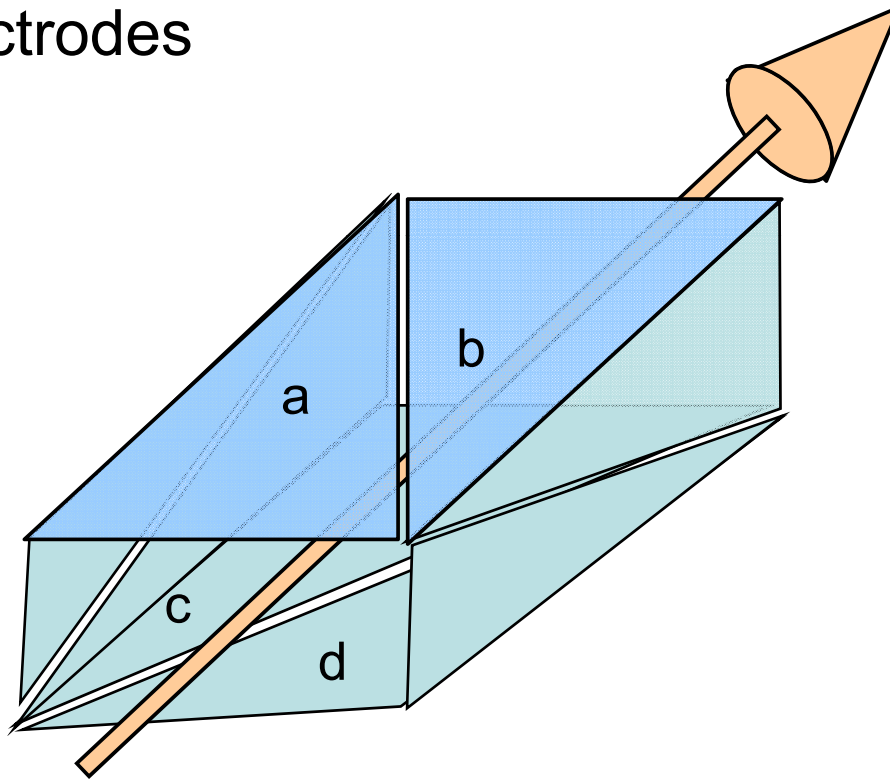




Simultaneous horizontal and vertical measurement

horizontal

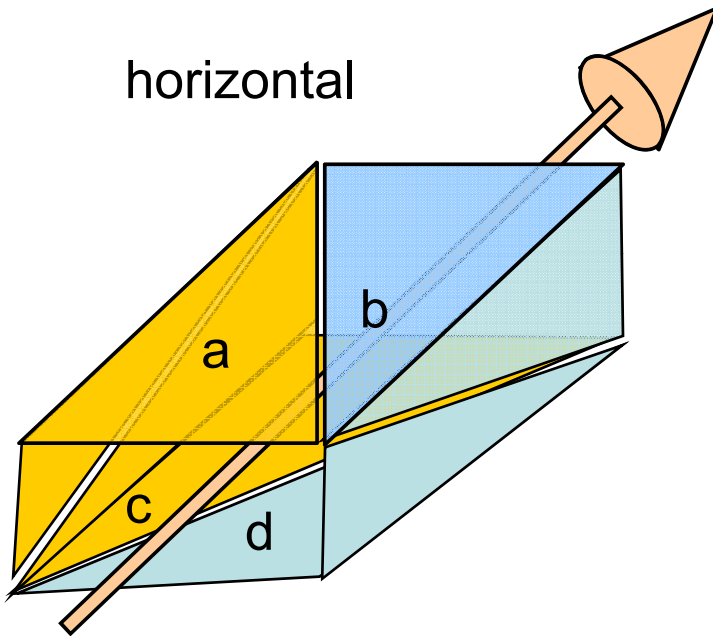

$$X = \frac{(U_a + U_c) - (U_b + U_d)}{\Sigma U}$$

vertical

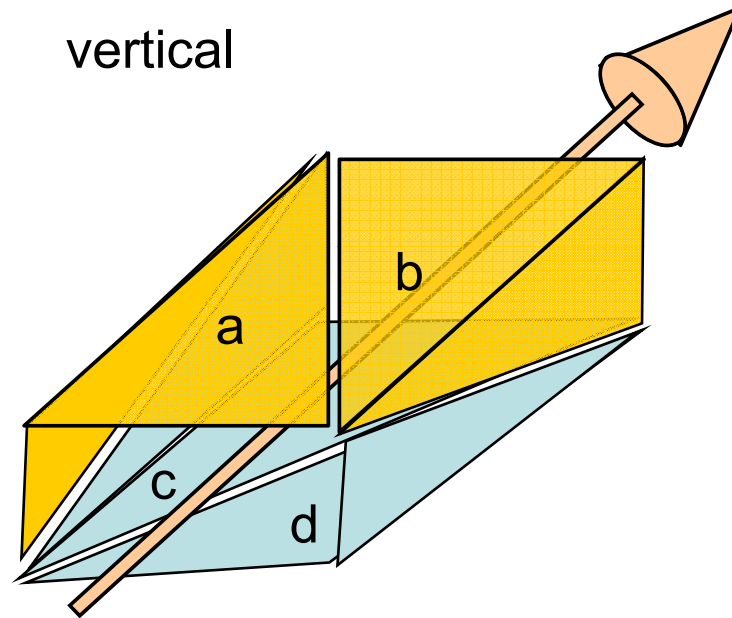


$$Y = \frac{(U_a + U_b) - (U_c + U_d)}{\Sigma U}$$



Interaction of particles with matter

- Coulomb interaction
- Average force in s-direction=0
- Average force in transverse direction $\langle \rangle 0$
- Mostly large impact parameter \Rightarrow low energy of ejected electron
- Electron mostly ejection transversely to the particle motion

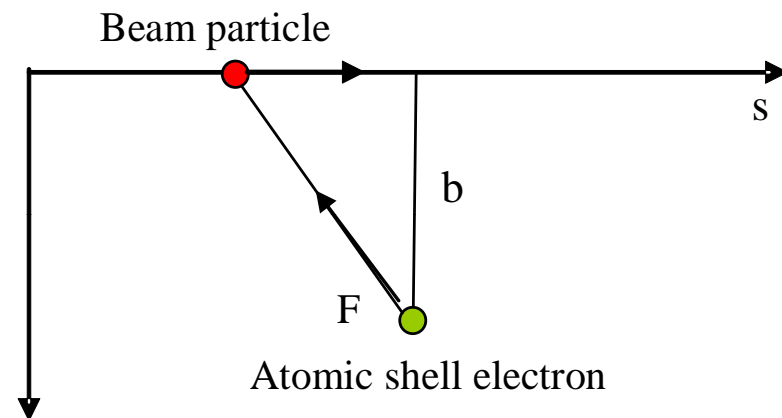



Bethe Bloch formula


$$-\frac{dE}{dx} = 4\pi N_A r_e^2 m_e c^2 \frac{Z_T}{A_T} \rho \frac{Z_p^2}{\beta^2} \left[\ln \frac{2m_e c^2 \gamma^2 \beta^2}{I} - \beta^2 \right]$$

- with the following constants:
 - NA: Avogadro's number
 - m_e and r_e : electron rest mass and classical electron radius
 - c: speed of light
- the following target material properties:
 - ρ : material density
 - A_T and Z_T : the atomic mass and nuclear charge
- and the particle properties:
 - Z_p : particle charge
 - β : the particles velocity and $\gamma = \sqrt{1 - \beta^2}$

Dependance on Z_p^2



High energy loss a low energies

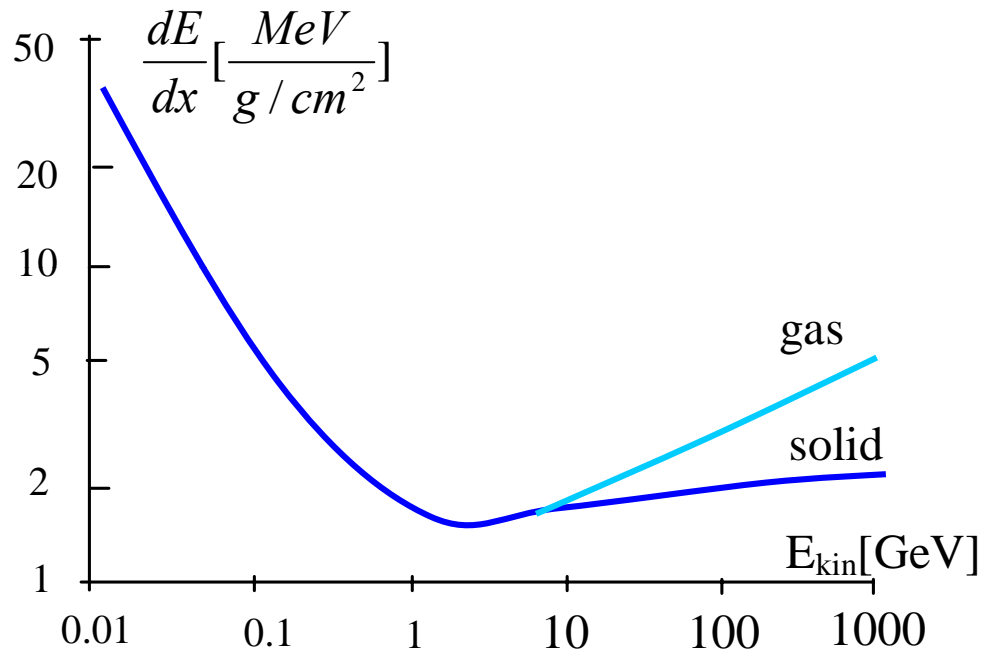

Heavy ions at low energy are stopped within a few micro-meters
All energy is deposited in a very small volume



Scintillating Screens

Method already applied in cosmic ray experiments


- Very simple
- Very convincing

Needed:

- Scintillating Material
- TV camera
- In/out mechanism


Problems:

- Radiation resistance
- Heating of screen (absorption of beam energy)
- Evacuation of electric charges


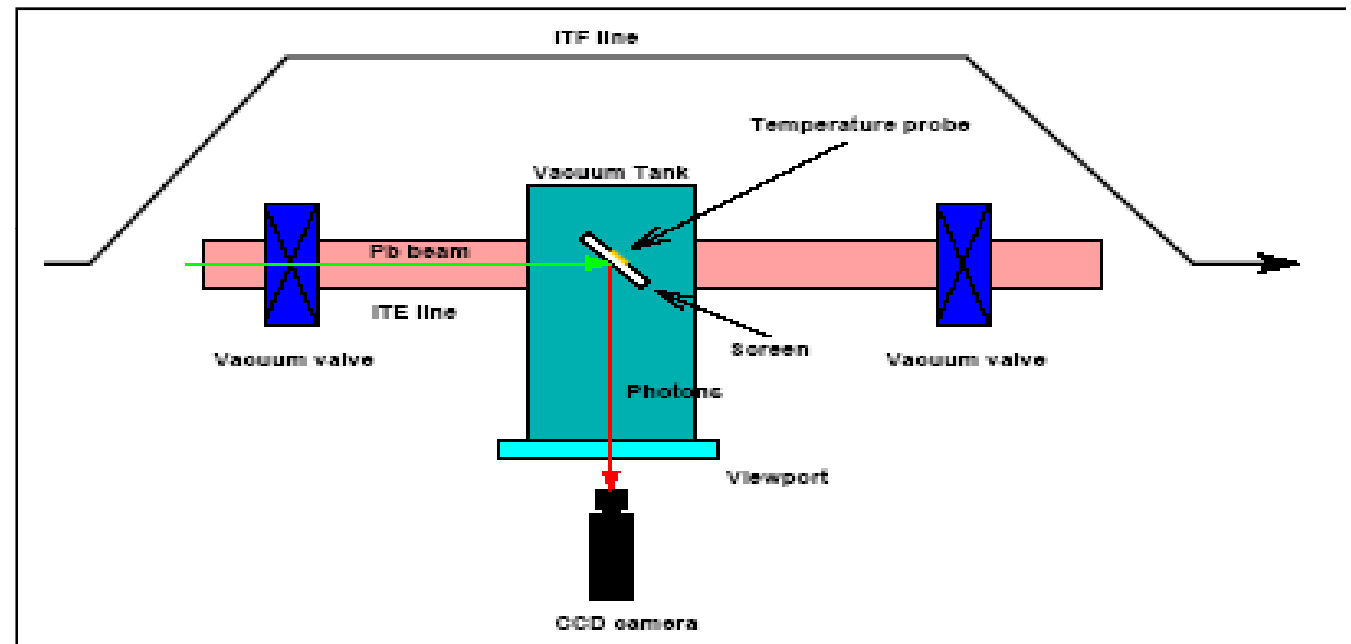




Frame grabber

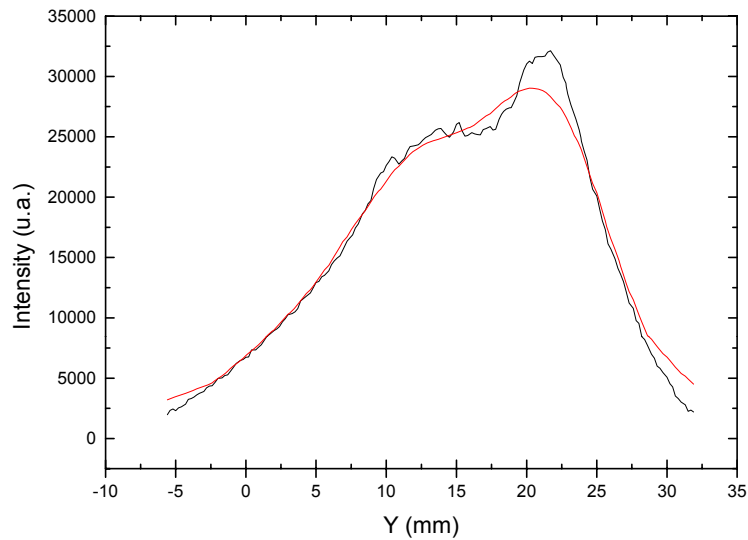

- For further evaluation the video signal is digitized, read-out and treated by program

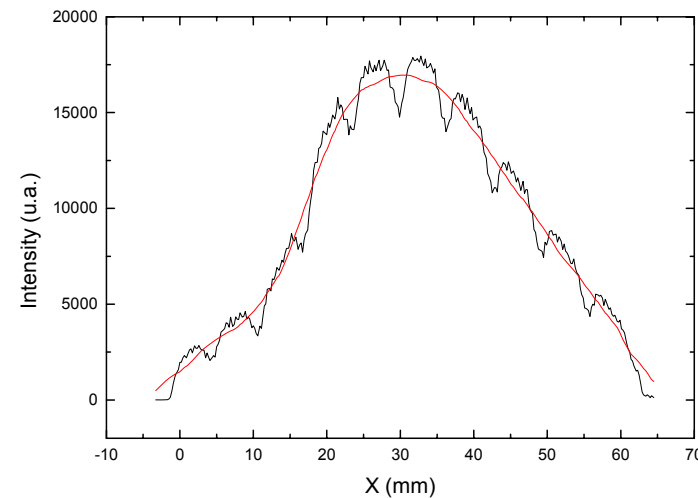
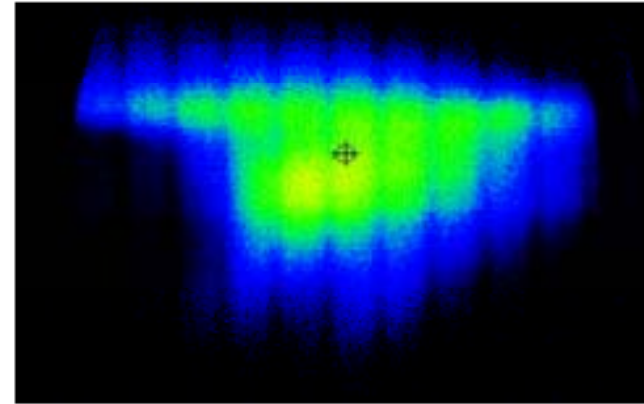




Test for resistance against heat-shock

Material	ρ g/cm ³	c_p at 20°C J/gK	k at 100°C W/mK	T_{max} °C	R at 400°C Ω.cm
Al ₂ O ₃	3.9	0.9	30	1600	10 ¹²
ZrO ₂	6	0.4	2	1200	10 ³
BN	2	1.6	35	2400	10 ¹⁴


Better for electrical conductivity (>400°C)
 Better for thermal properties
 (higher conductivity, higher heat capacity)

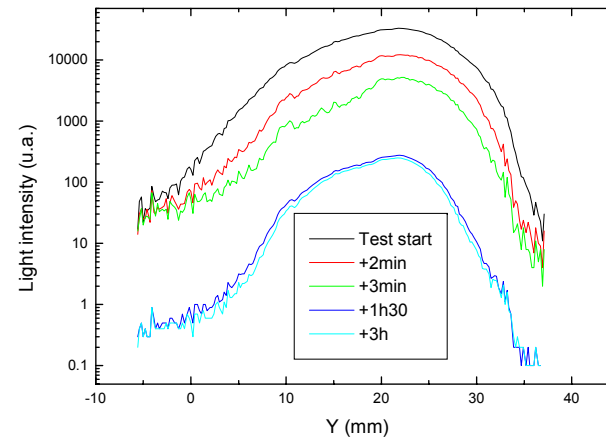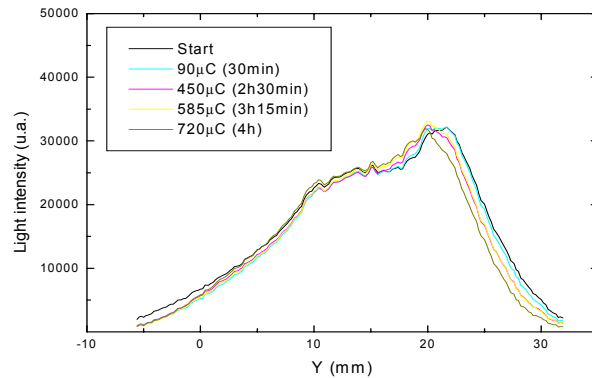



Degradation of screen


Degradation clearly visible
However sensitivity stays essentially
the same

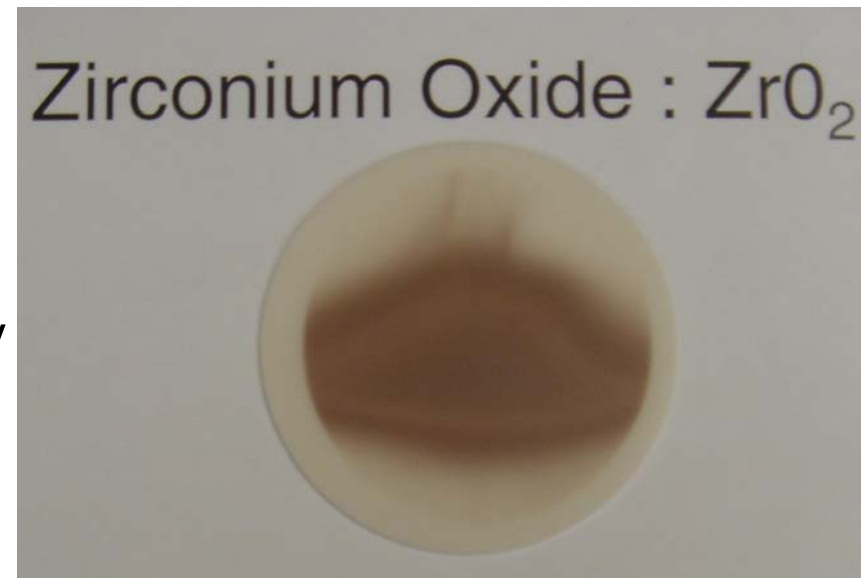



Screen mechanism

- Screen with graticule

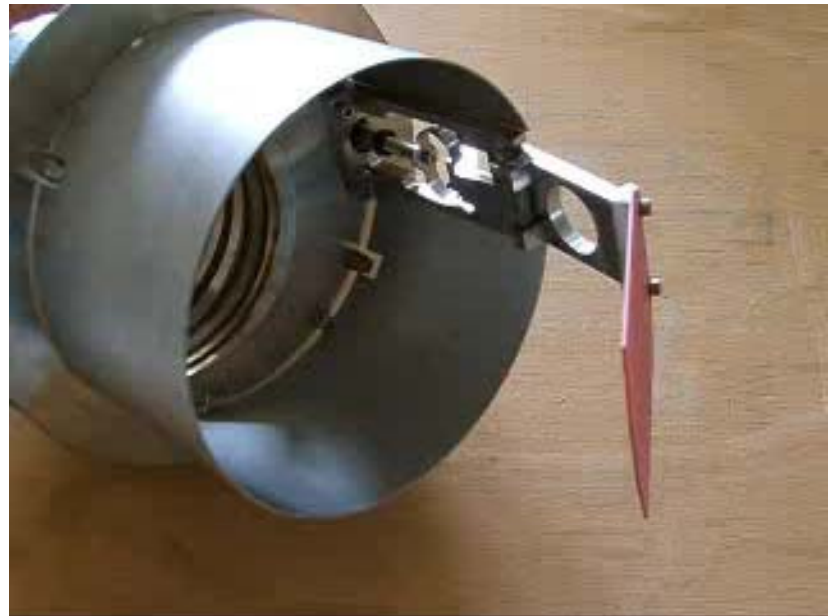



Profile measurements

- Secondary emission grids (SEMgrids)

When the beam passes secondary electrons are ejected from the ribbons

The current flowing back onto the ribbons is measured



Electrons are taken away by polarization voltage

One amplifier/ADC chain channel per ribbon





SEM grids with wires

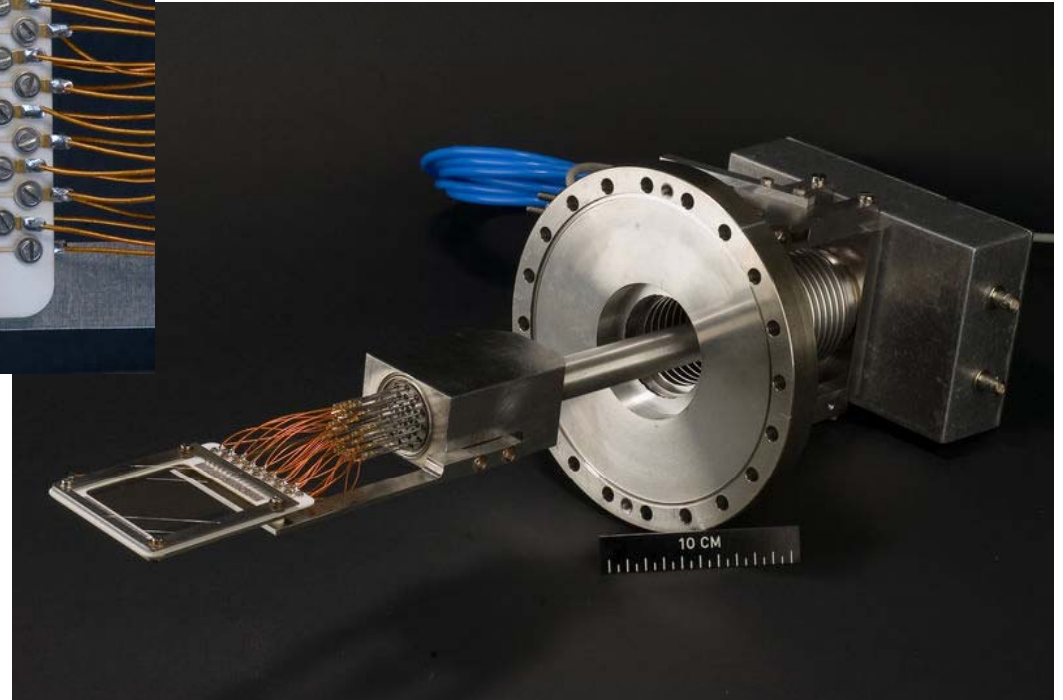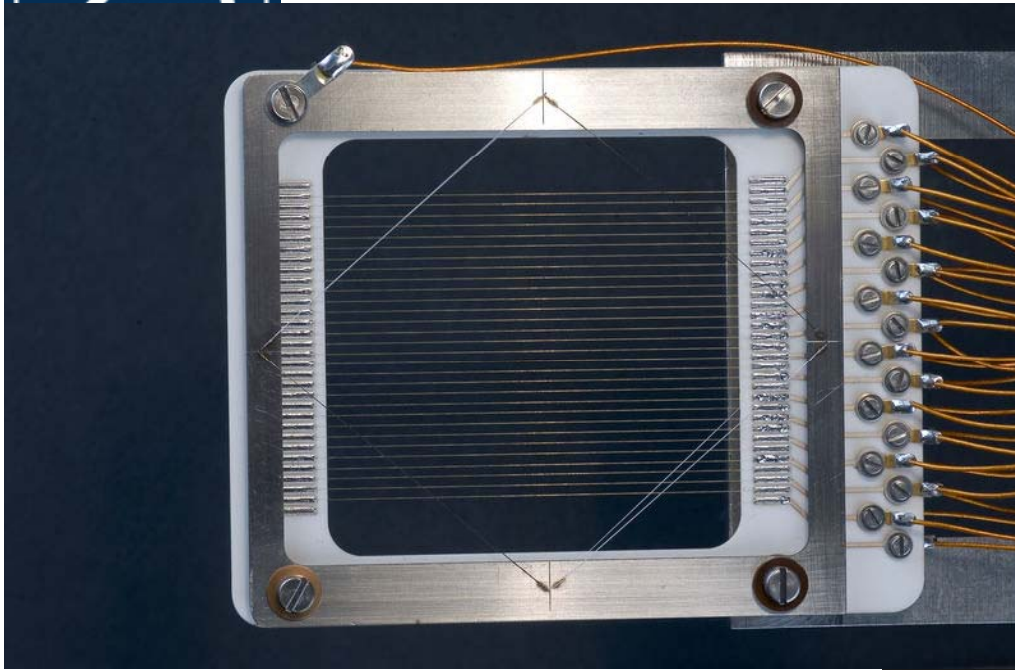


U. Raich CAS Frascati 2008
Beam Diagnostics


46

CAS

THE CERN ACCELERATOR SCHOOL

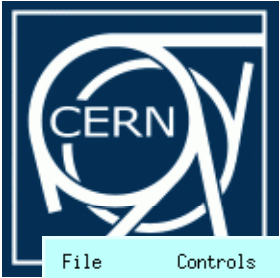

Profiles from SEMgrids

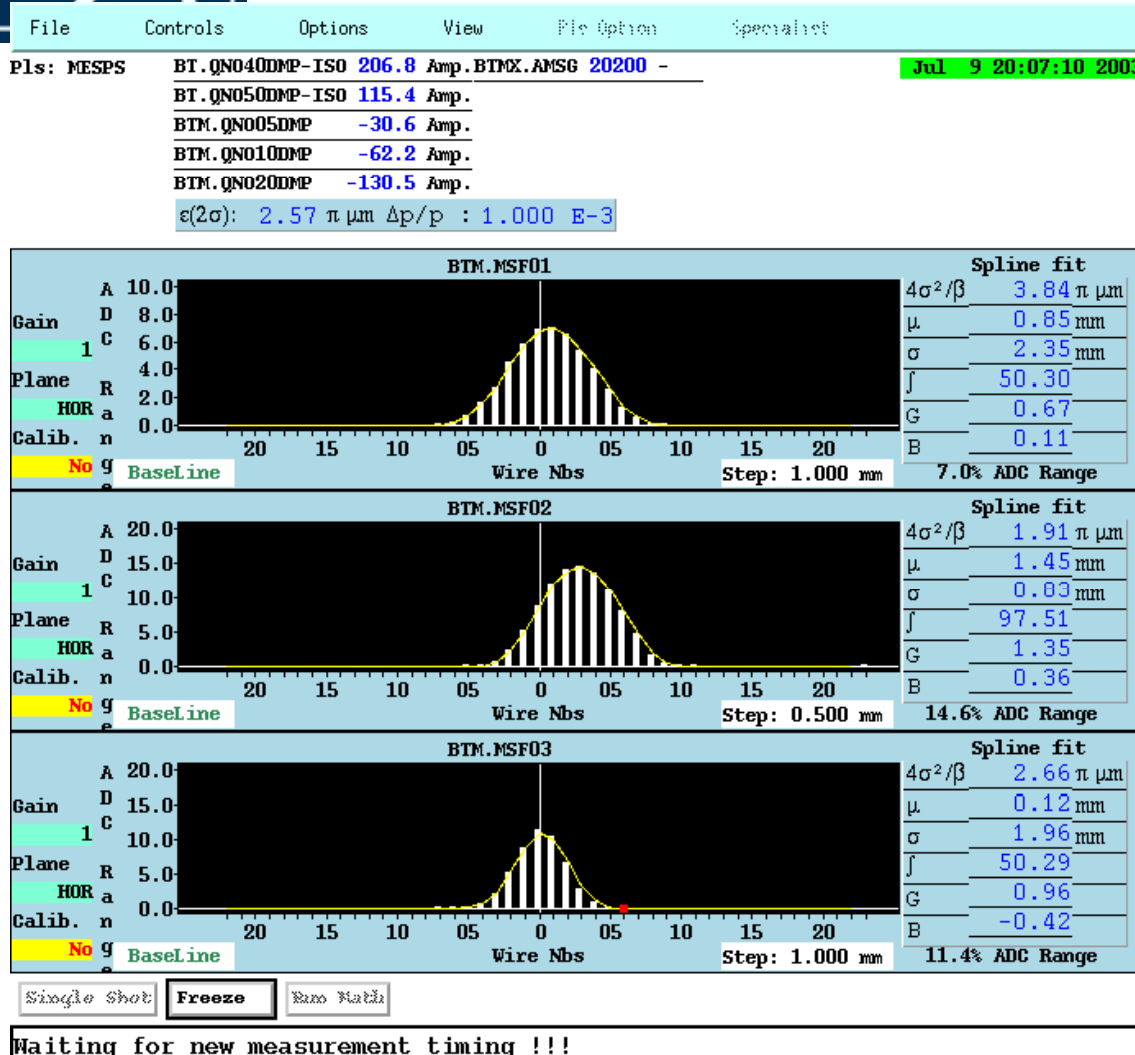

Projection of charge density projected to x or y axis is Measured

One amplifier/ADC per wire
Large dynamic range


Resolution is given by wire distance

Used only in transfer lines




Wire Scanners

A thin wire is quickly moved across the beam
Secondary particle shower is detected outside the vacuum chamber
on a scintillator/photo-multiplier assembly
Position and photo-multiplier signal are recorded simultaneously

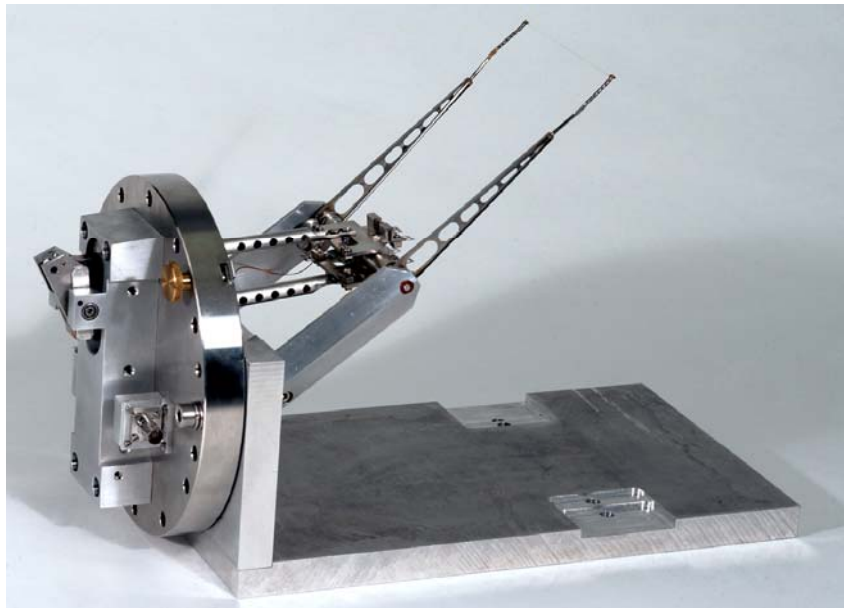



Wire scanner profile

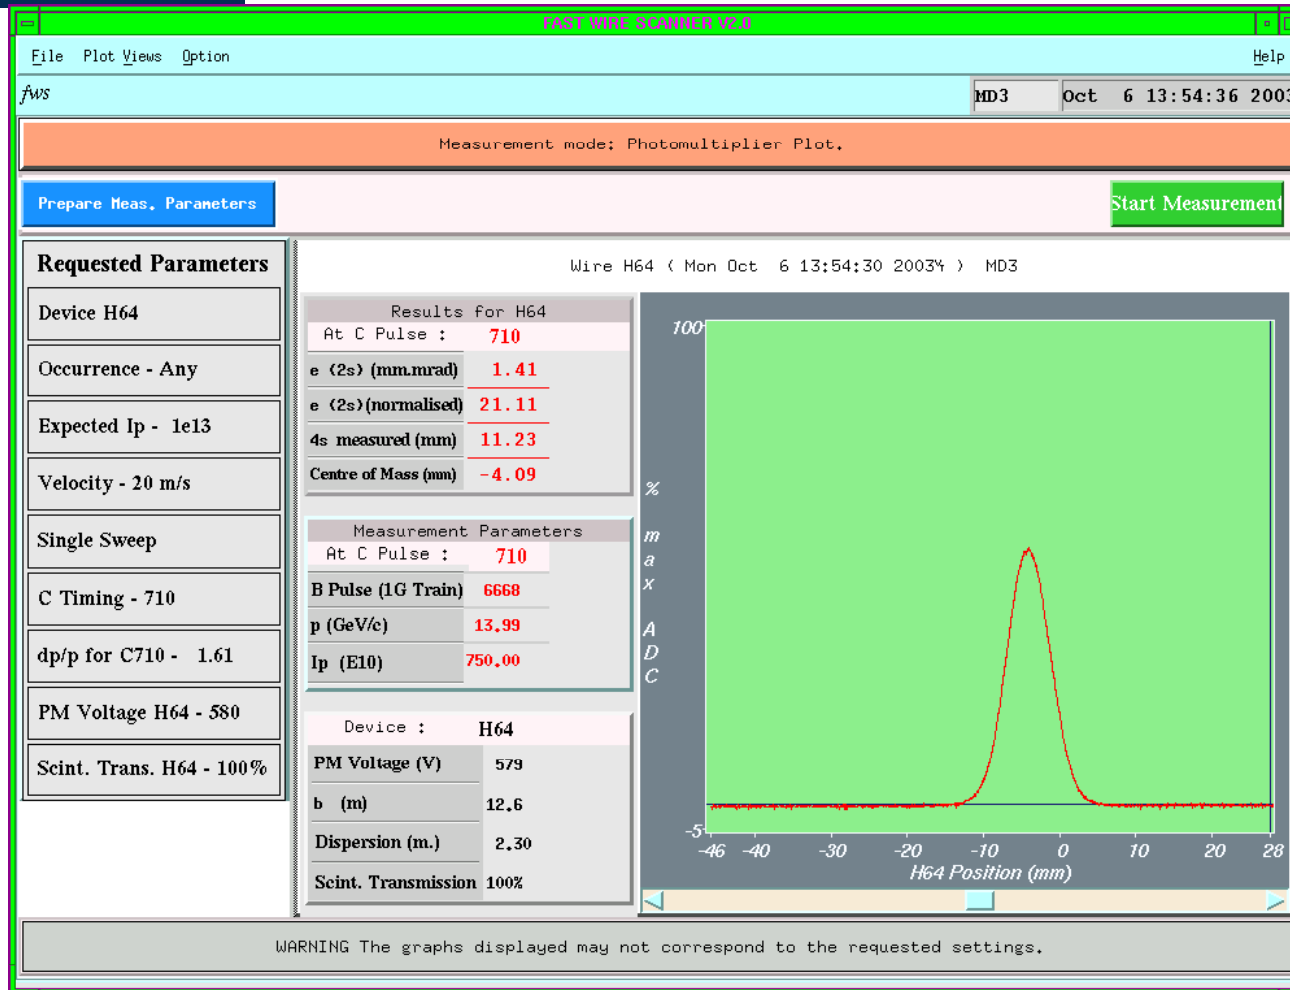

High speed needed because of heating.

Adiabatic damping

Current increase due to Speed increase

Speeds of up to 20m/s => 200g acceleration



Beam power in the LHC



The Linac beam (160 mA, 200 μ s, 50 MeV, 1Hz) is enough to burn a hole into the vacuum chamber

What about the LHC beam: 2808 bunches of $15 \cdot 10^{11}$ particles at 7 TeV?


1 bunch corresponds to a 5 kg bullet at 800 km/h





Stored Beam Energies


(Based on graph from R. Schmidt)

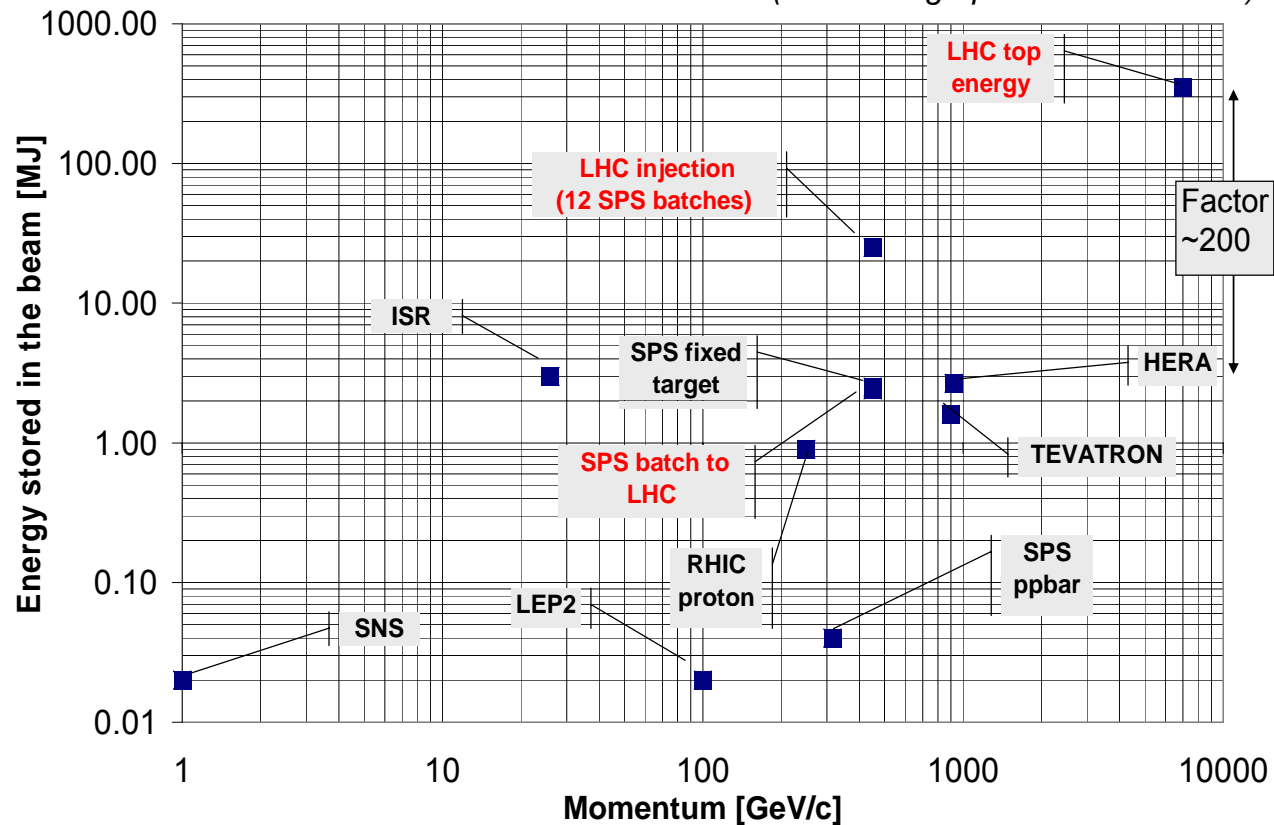

Quench Levels	Units	<i>Tevatron</i>	<i>RHIC</i>	<i>HERA</i>	<i>LHC</i>
<i>Instant loss (0.01 - 10 ms)</i>	[J/cm ³]	4.5 10 ⁻⁰³	1.8 10 ⁻⁰²	2.1 10 ⁻⁰³ - 6.6 10 ⁻⁰³	8.7 10 ⁻⁰⁴
<i>Steady loss (> 100 s)</i>	[W/cm ³]	7.5 10 ⁻⁰²	7.5 10 ⁻⁰²		5.3 10 ⁻⁰³



Beam Dammage

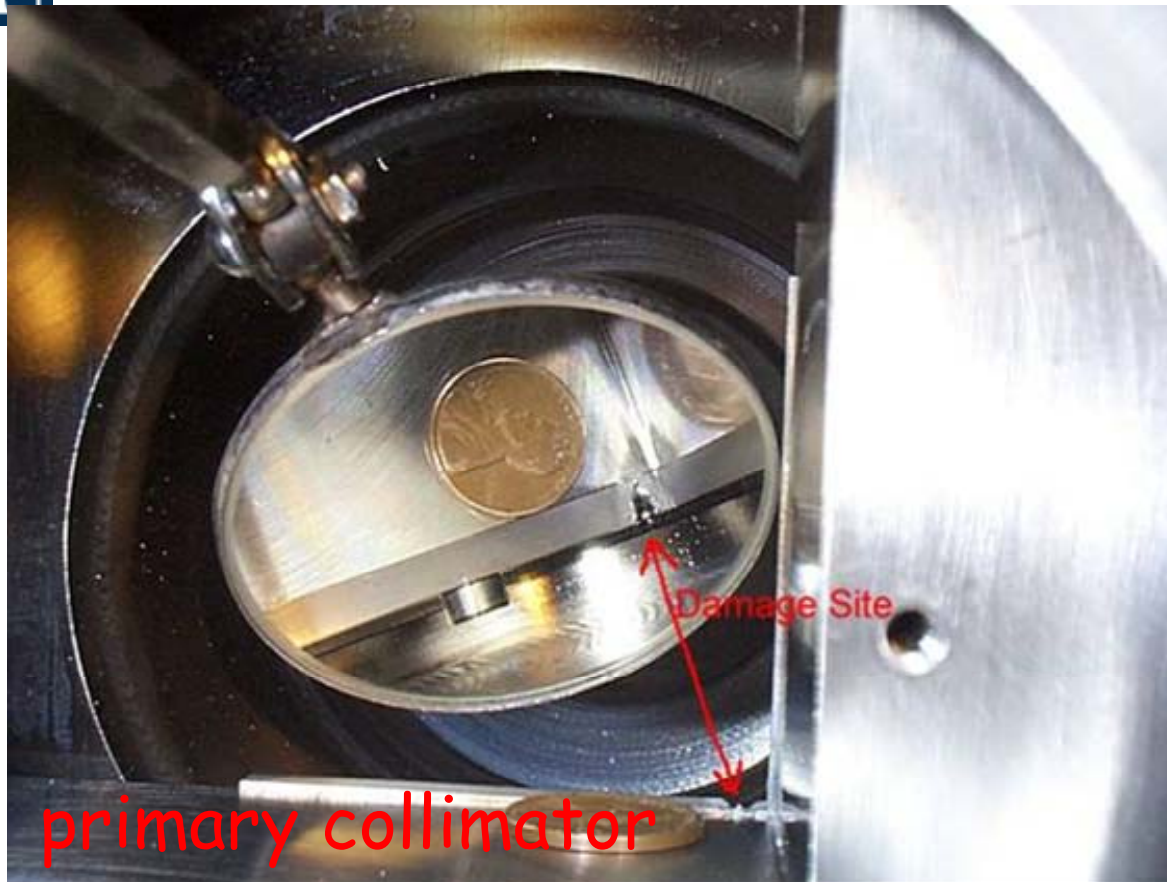

Fermi Lab's Tevatron has 200 times less beam power than LHC!



Beam Loss Monitor Types

- Design criteria: Signal speed and robustness
- Dynamic range ($> 10^9$) limited by leakage current through insulator ceramics (lower) and saturation due to space charge (upper limit).

Secondary Emission Monitor

(SEM):

- Length 10 cm
- $P < 10^{-7}$ bar
- ~ 30000 times smaller gain

Ionization chamber:

- N_2 gas filling at 100 mbar over-pressure
- Length 50 cm
- Sensitive volume 1.5 l
- Ion collection time 85 μ s



U. Raich CAS Frascati 2008
Beam Diagnostics



- Both monitors:
 - Parallel electrodes (Al, SEM: Ti) separated by 0.5 cm
 - Low pass filter at the HV input
 - Voltage 1.5 kV


53

CAS

THE CERN ACCELERATOR SCHOOL



Quench levels

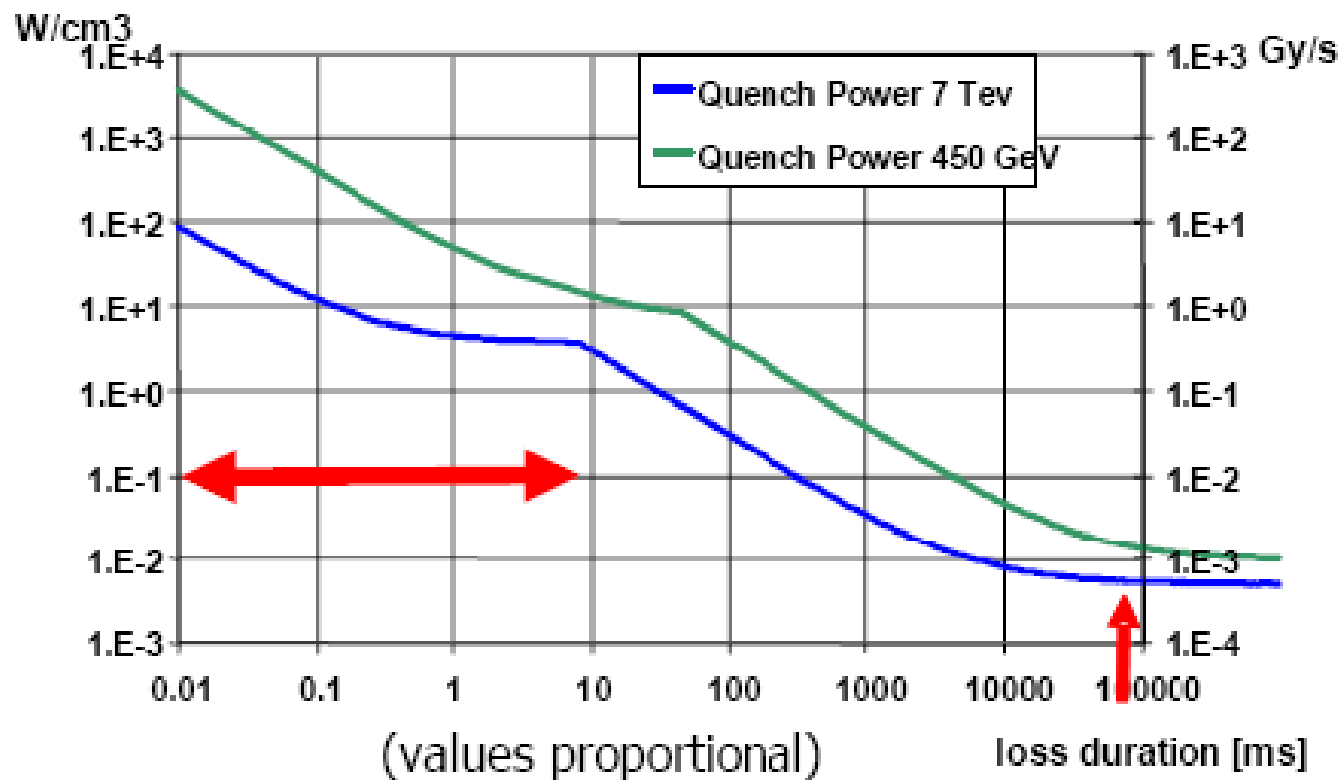




Industrial production of chambers



Beam loss must be measured all around the ring
=> 4000 sensors!



System layout

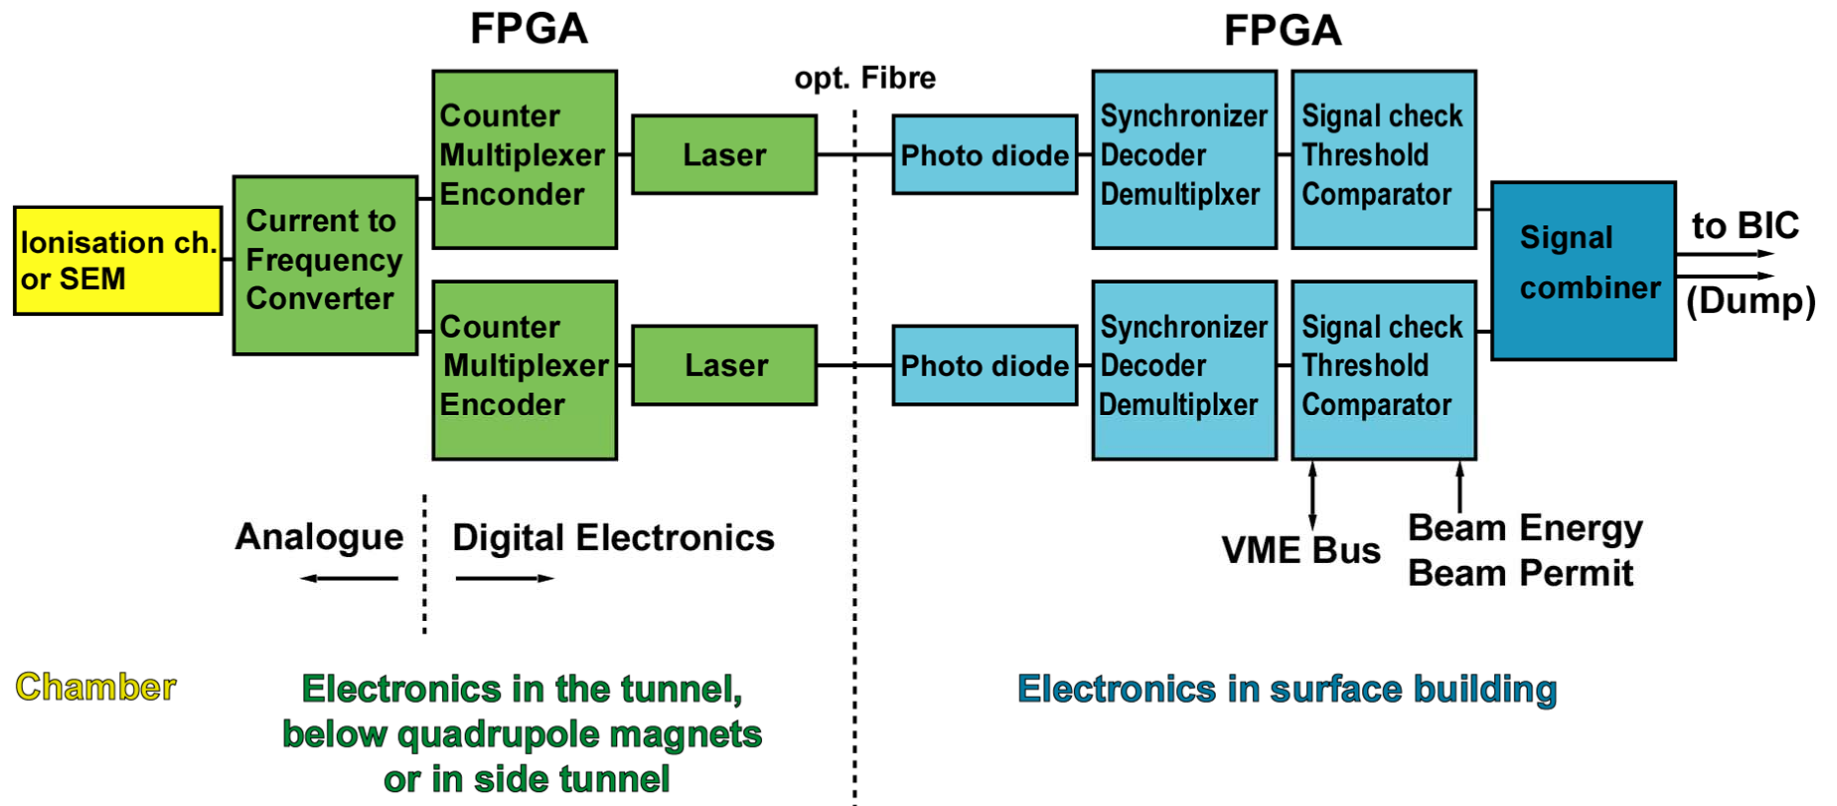

Chamber



Successive running sums

